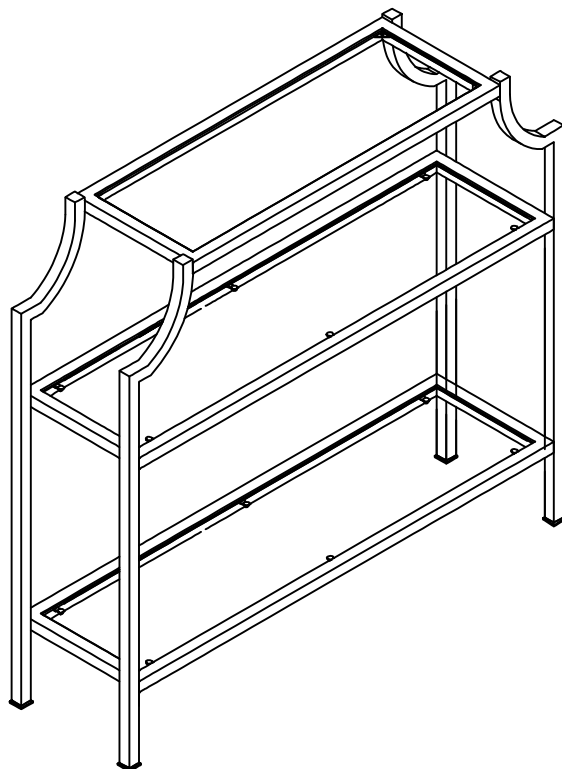


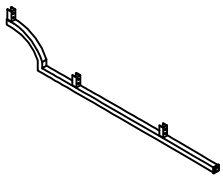
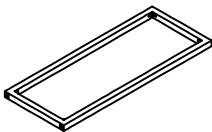
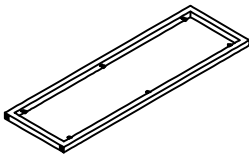
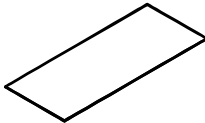
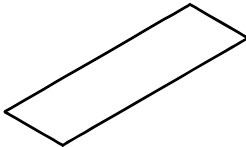
CROSLEY

FURNITURE


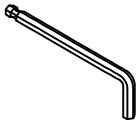


Glass Console Table CF1307



PART LIST


<div data-bbox="153 217 197 264">A</div> 	<div data-bbox="418 217 462 264">B</div> 	<div data-bbox="683 217 727 264">C</div> 	<div data-bbox="949 217 994 264">D</div> 	<div data-bbox="1216 217 1260 264">E</div> 
<div data-bbox="233 499 330 566">Leg 4 PCS</div>	<div data-bbox="426 499 665 566">Top Shelf Frame 1 PC</div>	<div data-bbox="730 499 911 566">Shelf Frame 2 PCS</div>	<div data-bbox="965 499 1197 566">Top Glass Shelf 1 PC</div>	<div data-bbox="1267 499 1436 566">Glass Shelf 2 PCS</div>

HARDWARE LIST

<div data-bbox="153 685 197 732">#1</div> 	<div data-bbox="418 685 462 732">#2</div> 	<div data-bbox="683 685 727 732">#3</div> 	<div data-bbox="949 685 994 732">#4</div> 
<div data-bbox="165 902 394 936">1/2"x 1/4" xD10</div> <div data-bbox="162 967 410 1041">Bolt 25 PCS (Extra 1)</div>	<div data-bbox="454 967 651 1041">Allen Wrench 1 PC</div>	<div data-bbox="699 967 927 1041">Safety Strap Kit 1 Set</div>	<div data-bbox="991 967 1177 1041">Suction Cup Extra 2 PCS</div>

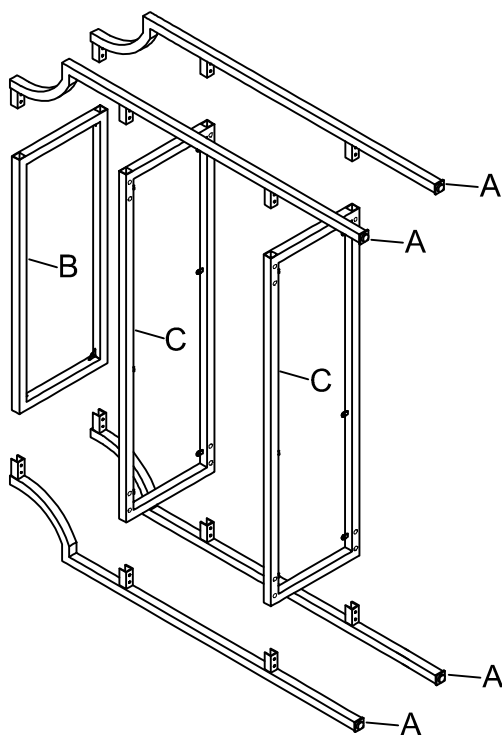
ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.



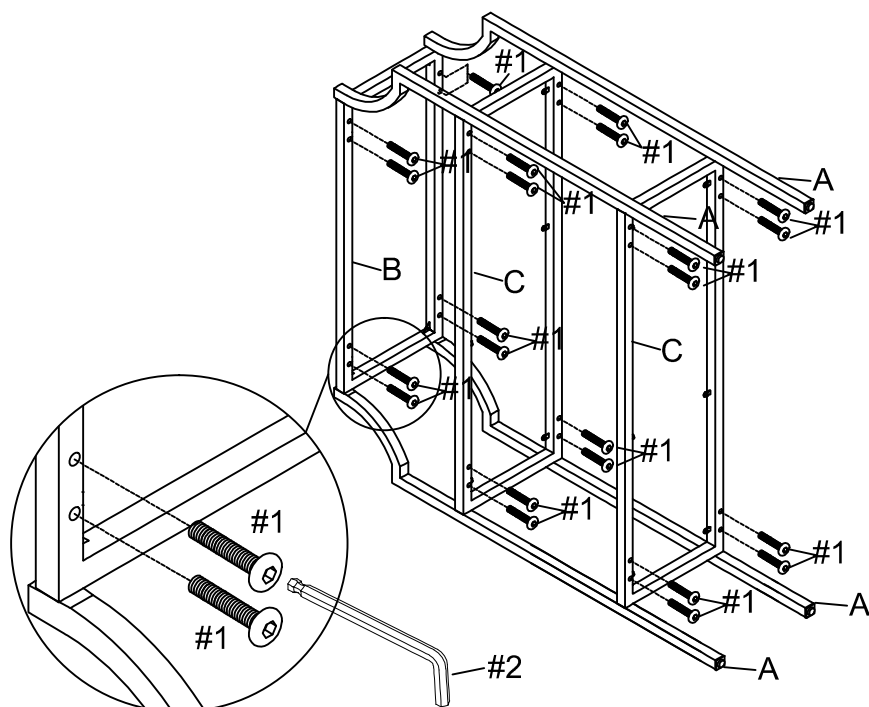
Phillips Head Screwdriver



Step 1. Lay 2 legs (part A) down on a flat surface, such as carpet, as shown below. Insert top shelf frame (part B) and shelf frames (part C) into brackets of legs (part A). Attach remaining 2 legs (part A) by inserting brackets into top shelf frame (part B) and shelf frames (part C).



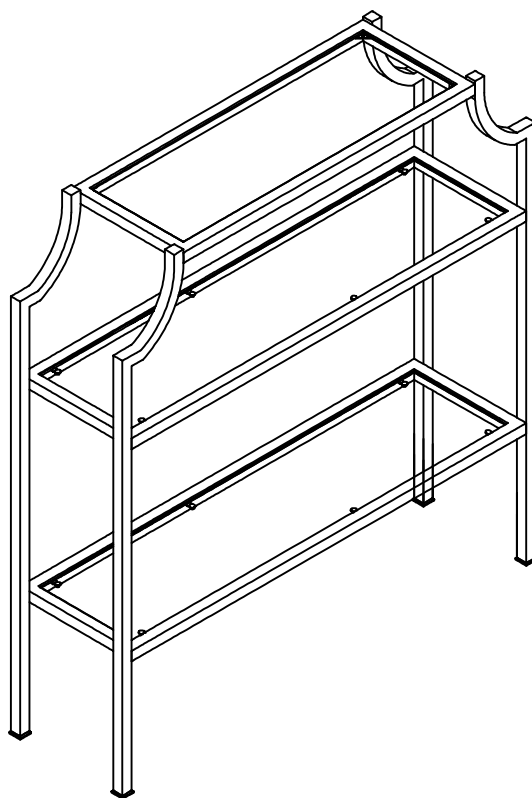
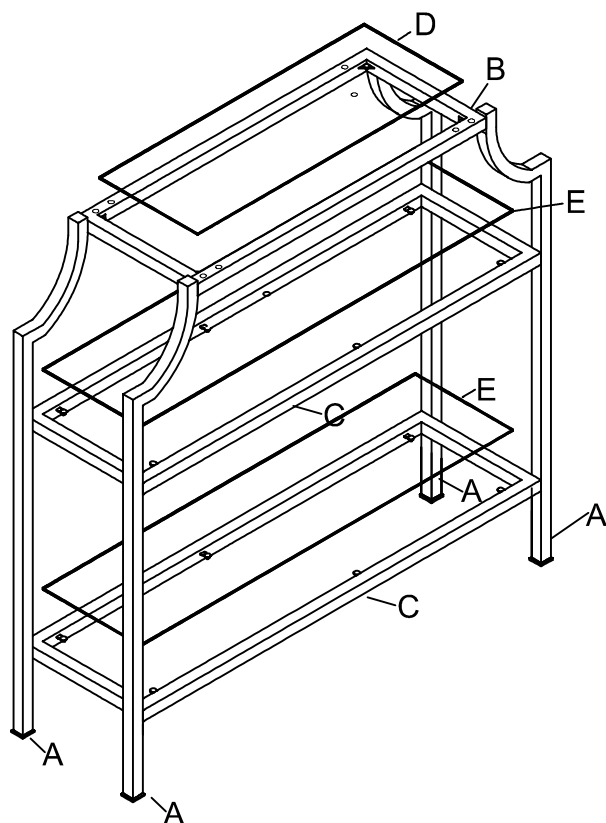
Step 2. Attach top shelf frame (part B) and shelf frames (part C) to the legs (part A) using bolts (part #1) and allen wrench (part #2).



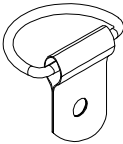



NOTE: Please do not fully tighten bolts until all of them are in place.



#1  x 24
#2  x 1

Step 3. Carefully turn unit upright. Install top glass shelf (part D) and glass shelves (part E) into the frame as shown below.



#3	A	B	C	D	E
			 D8*1/2"	 D10*1/2"	
SAFETY STRAP KIT 1 SET	WALL ANCHOR 1 PC	HOOK 2 PCS	SCREW 1 PC	BOLT 1 PC	SAFETY WALL STRAP 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Attach hook (B) to predrilled hole in top shelf frame (part B). Using bolt (D) and a phillips head screwdriver.
2. Drill a 11/32" hole in the wall where this unit will be secured. The drilled hole will be at the same height as the hole in top shelf frame (part B) where hook (B) was attached. Tap wall anchor (A) into the drilled hole.
3. Attach hook (B) to wall anchor (A) using screw (C) and phillips head screwdriver.
4. Insert safety wall strap (E) through both hooks (B) and tighten to secure.

Note: This item is not intended for clothing storage use.

