




## Console Table CF1340

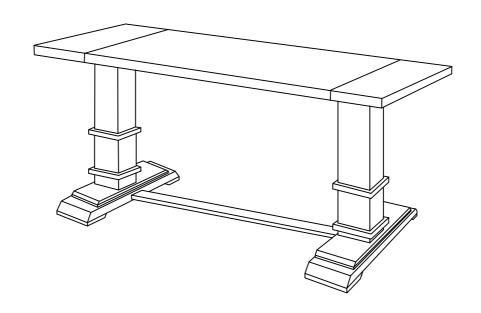

## **PART LIST**

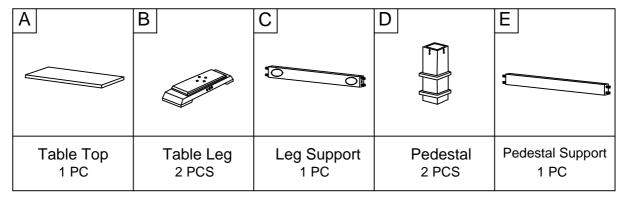

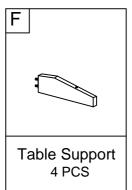


## HARDWARE LIST


#1	#2	#3	#4	#5
				0 -
5/16"	5/16"	5/16"x19"	12.8mm	M6 x 90mm
Hex Nut 6 PCS (Extra 1)	Large Spring Washer 6 PCS (Extra 1)	Large Flat Washer 6 PCS (Extra 1)	Wrench 1 PC	Long Bolt 6 PCS (Extra 1)

#6	#7	#8	#9	#10
() <i></i>				
M6 x 50mm	1/4"	M6 x 13mm	1/4x19"	M5
Short Bolt 8 PCS (Extra 1)	Spring Washer 14 PCS (Extra 1)	Small Flat Washer 8 PCS (Extra 1)	Flat Washer 6 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Attach leg support (part C) to table legs (part B) using small flat washers (part #8), spring washers (part #7), short bolts (part #6) and allen wrench (part #10).

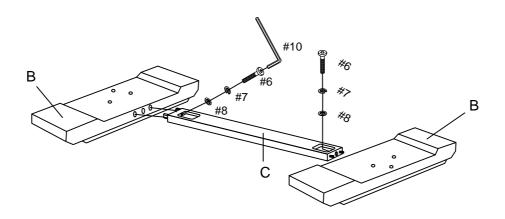


Step 2. Attach pedestal support (part E) to pedestals (part D) using large flat washers (part #3), large spring washers (part #2), hex nuts (part #1) and wrench (part #4).

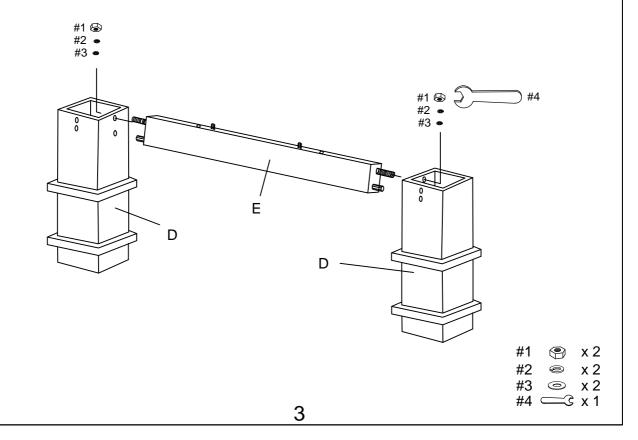


Step 3. Attach table supports (part F) to pedestals (part D) using large flat washers (part #3), large spring washers (part #2), hex nuts (part #1) and wrench (part #4).

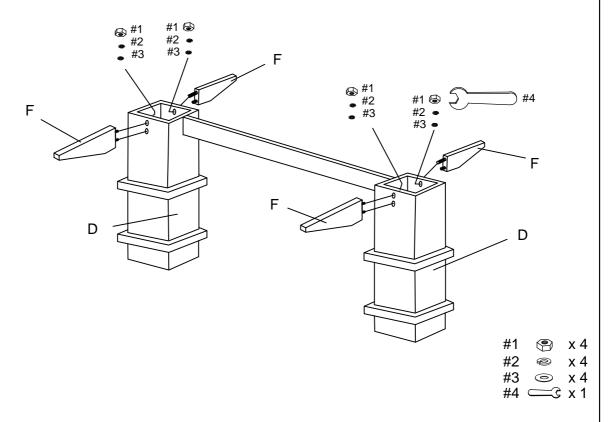

Step 4. Turn unit upside down. Lay table top (part A) upside down on soft surface, such as carpet. Attach assembled unit (parts D, E & F) to table top (part A) using small flat washers (part #8), spring washers (part #7), short bolts (part #6) and allen wrench (part #10).

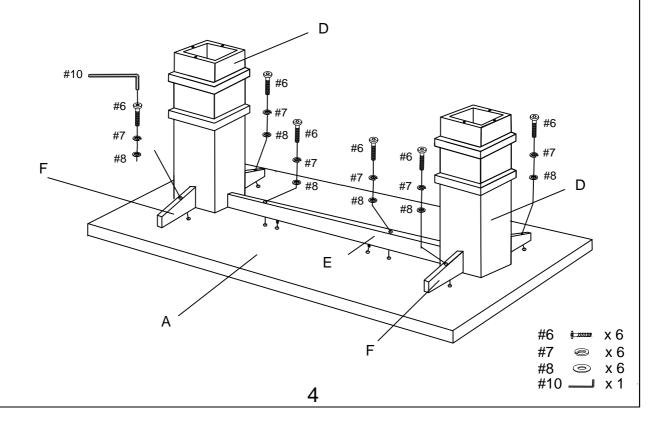

Step 5 . Attach table legs (part B) to pedestals (part D) using flat washers (part #9), spring washers (part #7), long bolts (part #5) and allen wrench (part #10).

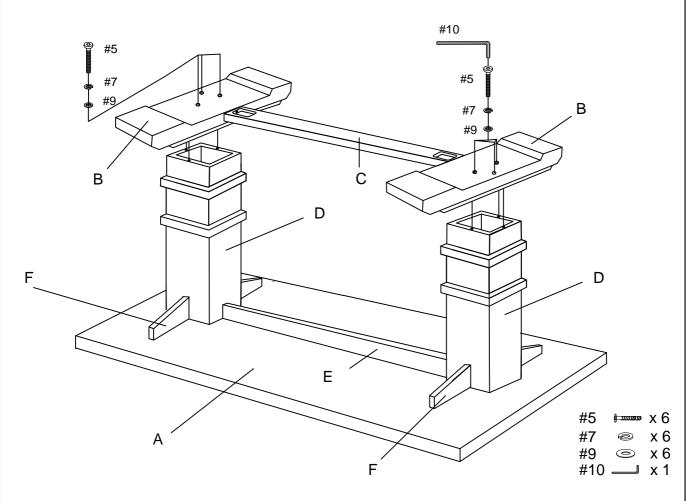

Step 6. Carefully turn assembled unit upright.

