

ASSEMBLY INSTRUCTIONS

Item No: 33170

Description: QN HB-REGENTS PARK

Item No: 33171

Description: QN FB W/SLTS-REGENTS PARK



Item No: 33172

Description: Q/K RAILS-REGENTS PARK

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.



TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER

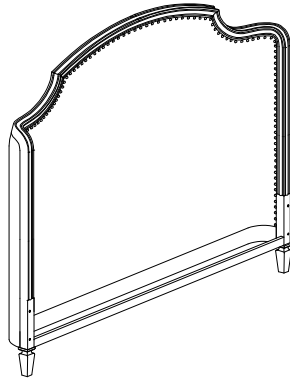

33170 Headboard

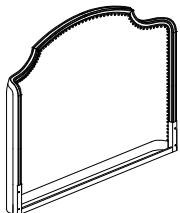



PARTS LIST:

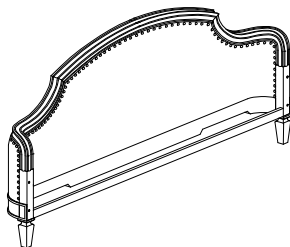
No.	Description	Sketch	Quantity
A	Headboard		1
B	Legs		2



33171 Footboard

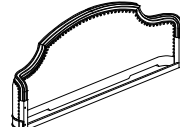
PARTS LIST:

No.	Description	Sketch	Quantity
C	Footboard		1
D	Legs		2
E	Slats		4
F	Support Legs		4

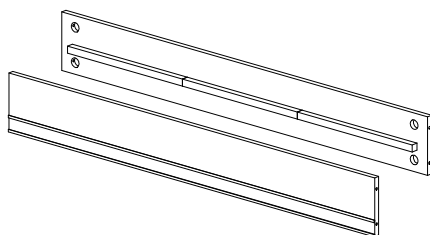





33172 Bed Rails

PARTS LIST:

No.	Description	Sketch	Quantity
G	Rails		2

HARDWARE LIST:

No.	Description	Sketch	Size	Quantity
H1	Long Bolt		Ø8 x 90mm	8
H2	Arc Washer & Nuts		Ø8 x 18mm	8
H3	Wood Screw		Ø4 x 25mm	8
H4	Open Wrench		12mm	1

ASSEMBLY INSTRUCTIONS

Item No: 33170

Description: QN HB-REGENTS PARK

Item No: 33171

Description: QN FB W/SLTS-REGENTS PARK

Item No: 33172

Description: Q/K RAILS-REGENTS PARK



ASSEMBLY PROCEDURE:

Step 1.

Place the Headboard (A) and Footboard (C) on their back, on a clean and soft surface.

Attach the Legs (B) & (D) to the Headboard (A) and Footboard (C).

Tighten Legs fully to where the square sides align.

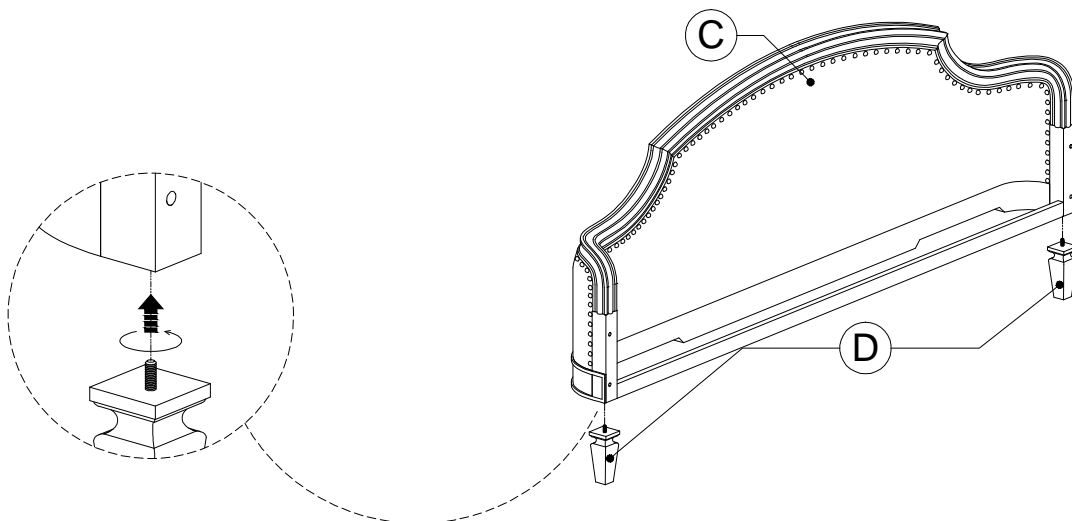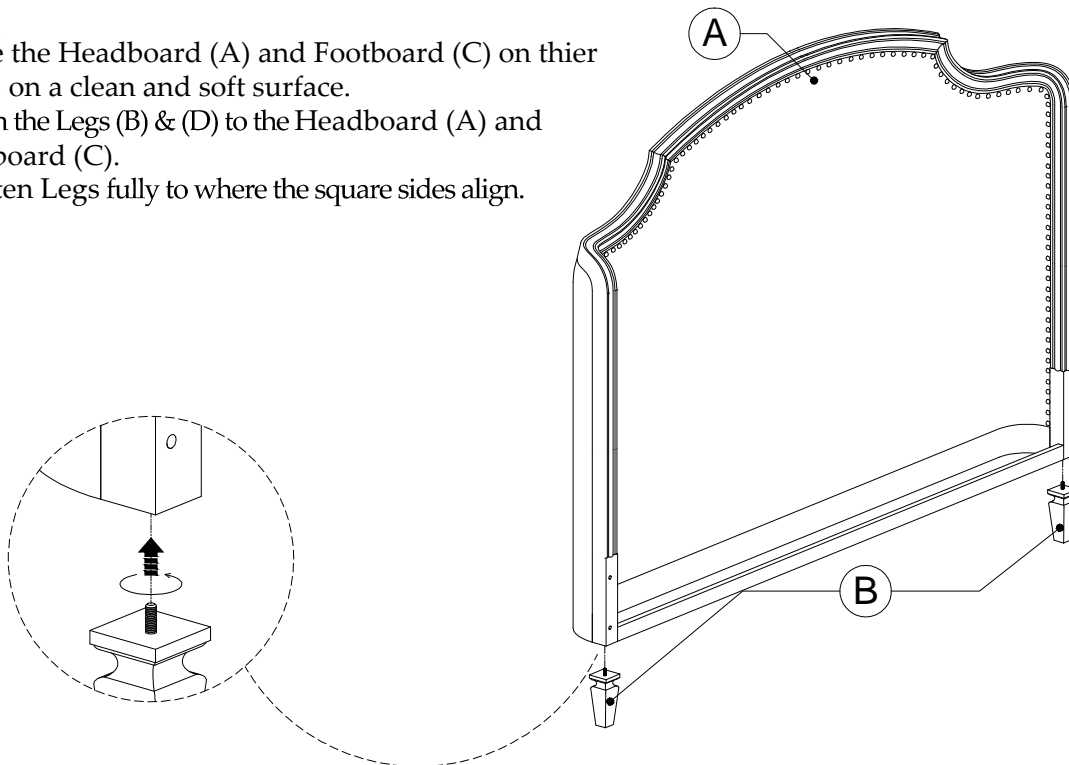

ASSEMBLY INSTRUCTIONS

Item No: 33170

Description: QN HB-REGENTS PARK

Item No: 33171

Description: QN FB W/SLTS-REGENTS PARK





Item No: 33172

Description: Q/K RAILS-REGENTS PARK



Step 2.

Gently lean the back of the assembled Headboard against the wall where the Bed will be located in the room.

Install the Ø8 x 90mm Long All-Thread Bolts (H1) to the threaded inserts of the Headboard and Footboard.

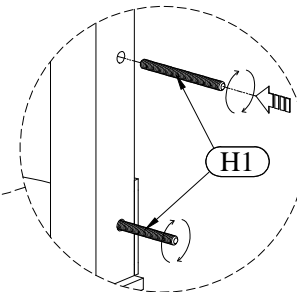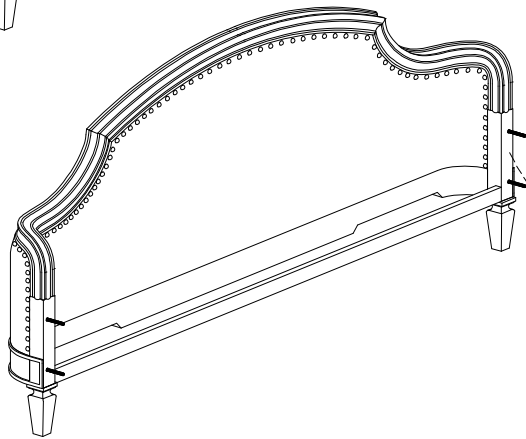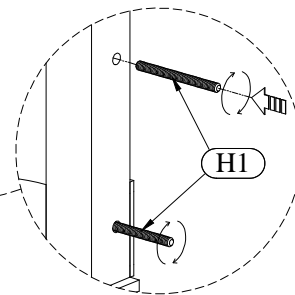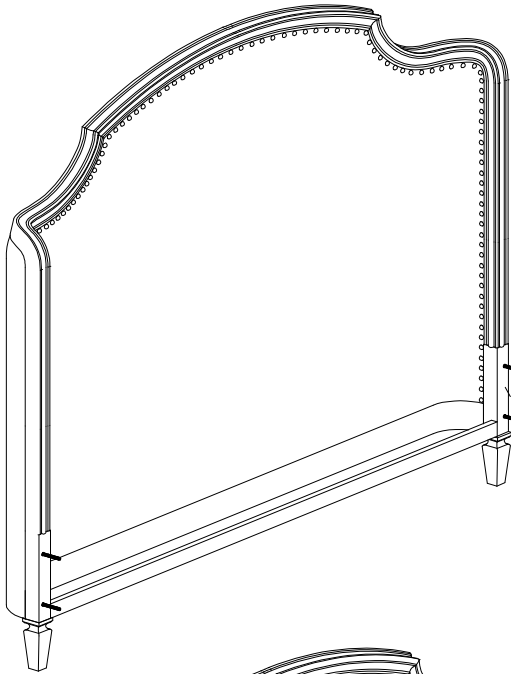

Step 3. Attach the Support Legs (F) to all four Slats (E).

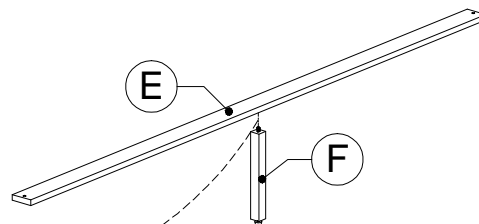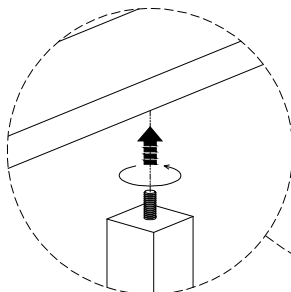

ASSEMBLY INSTRUCTIONS

Item No: 33170

Description: QN HB-REGENTS PARK

Item No: 33171

Description: QN FB W/SLTS-REGENTS PARK

Item No: 33172

Description: Q/K RAILS-REGENTS PARK


Step 4.

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

Carefully position one end of one Bed Rail (G) onto the All-Thread Bolts on the Headboard and connect with the Arc Washers & Nuts (H2). Only partially tighten the Nuts until the Footboard has been connected. Repeat for the other Bed Rail.

Position and connect the Footboard (C) to the other end of the Bed Rails, as in the previous Steps.

Carefully align the Footboard to be 'square' with the Headboard. Using the 12mm Open Wrench (H4) tighten all Nuts attaching the Side Rails to the Headboard and Footboard.

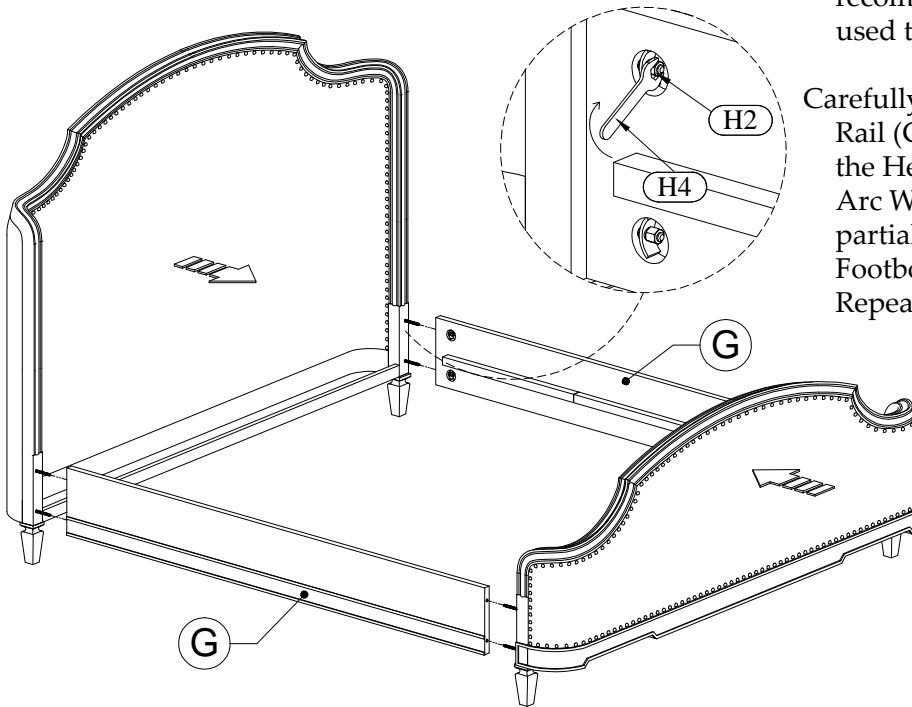

Step 5. Position the Slats on the Bed Rails as shown.

Attach the Slats to the Bed Rails using the Wood Screws (H3) and your Phillips Screwdriver.

The levelers located at the bottom of the Support Legs can be adjusted if necessary to support the Slats.

