
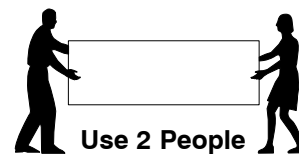


# Full Bed















## Assembly Instructions

### 1 Assembled View

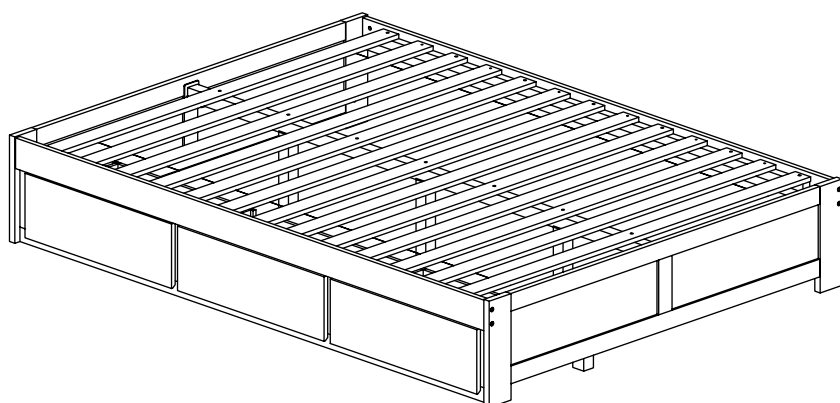

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List

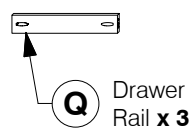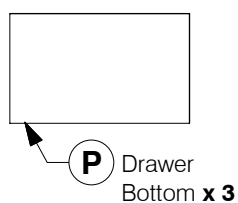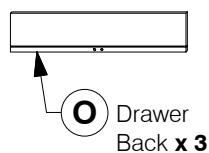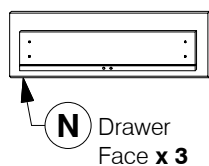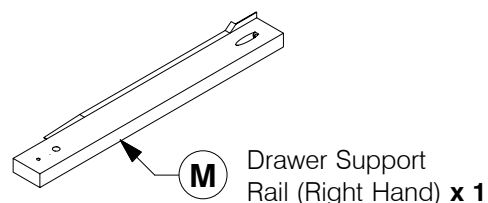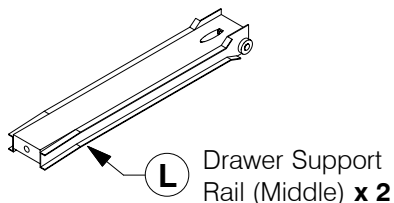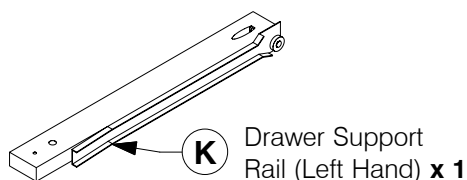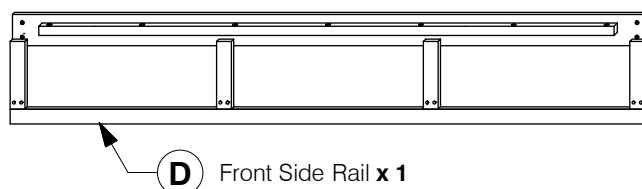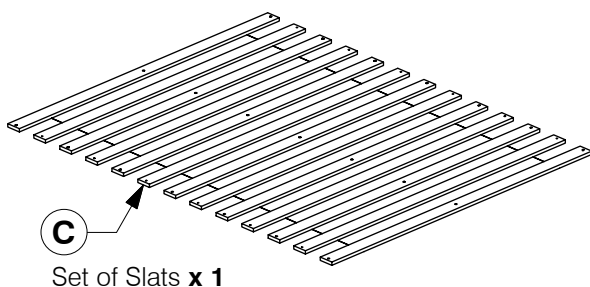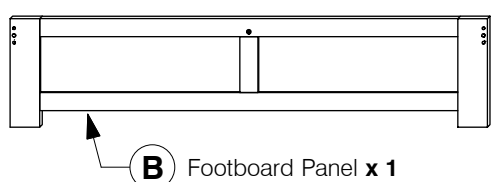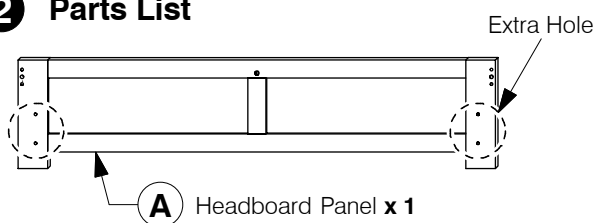

# Full Bed

## Assembly Instructions


### 3 Hardware List



① M6 x 100mm JCB  
x 3




② M6 x 70mm JCB  
x 8



③ M6 x 40mm JCB  
x 26



④ M6 x 15mm JCB  
x 4



⑤ Wood Dowel  
(10 x 40mm) x 4



⑥ Wood Dowel  
(8 x 30mm) x 8



⑦ Wood Dowel  
(6 x 25mm) x 12




⑧ Barrel Nut  
x 11




⑨ Spring  
Washer x 4




⑩ Flat Washer  
x 4




⑪ Wood Screw  
(M4 x 32mm) x 18



⑫ Wood Screw  
(M4 x 25mm) x 30

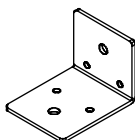

⑬ Center Rail  
Bracket x 2




⑭ Adjustable  
Foot x 3



⑮ Allen Key  
x 1


### 4 Fix the Adjustable foot to the bottom of the Support Legs (H).

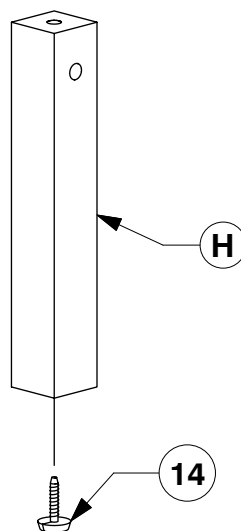


# Full Bed

## Assembly Instructions


- 5** Assemble the Drawer Sides (R & S) and Drawer Rail (Q) to the Drawer Back (O). Make sure the small wheels on the Drawer Sides (R & S) are next to the Drawer Back (O).

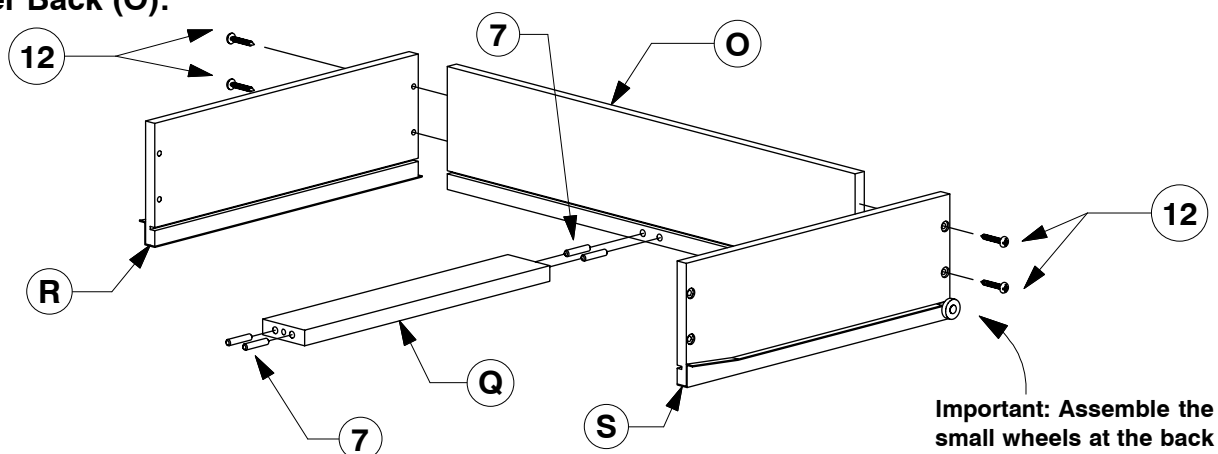


- 6** Slide the Drawer Bottom (P) into the groove on the Drawer Sides (R & S).

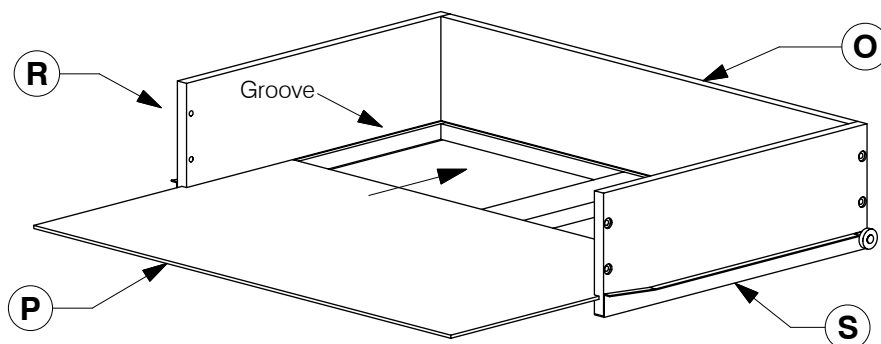

- 7** Assemble the Drawer Face (N) to the Drawer Sides (R & S).

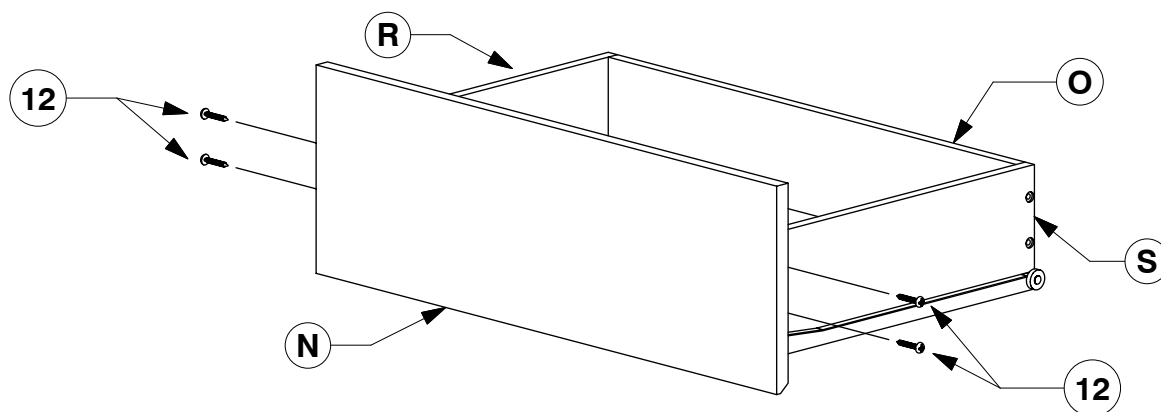


- 8** Turn the Drawer over to fit angled 25mm Wood screws (12) to the Drawer Rail (Q).

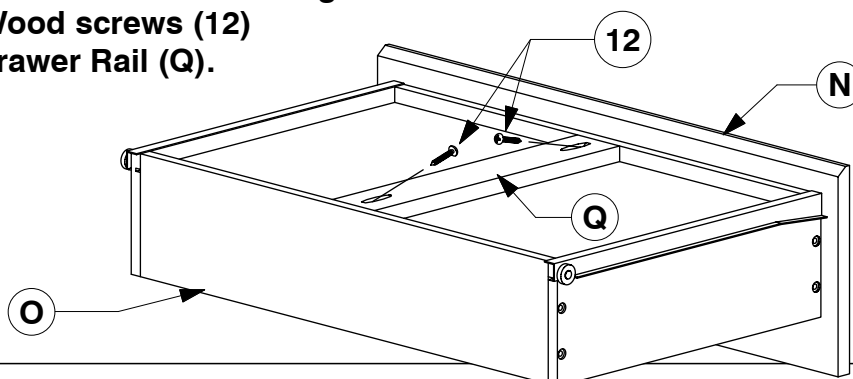


# Full Bed

## Assembly Instructions



- 9** Fit the Center Rail Bracket (13) to the Headboard Panel (A).

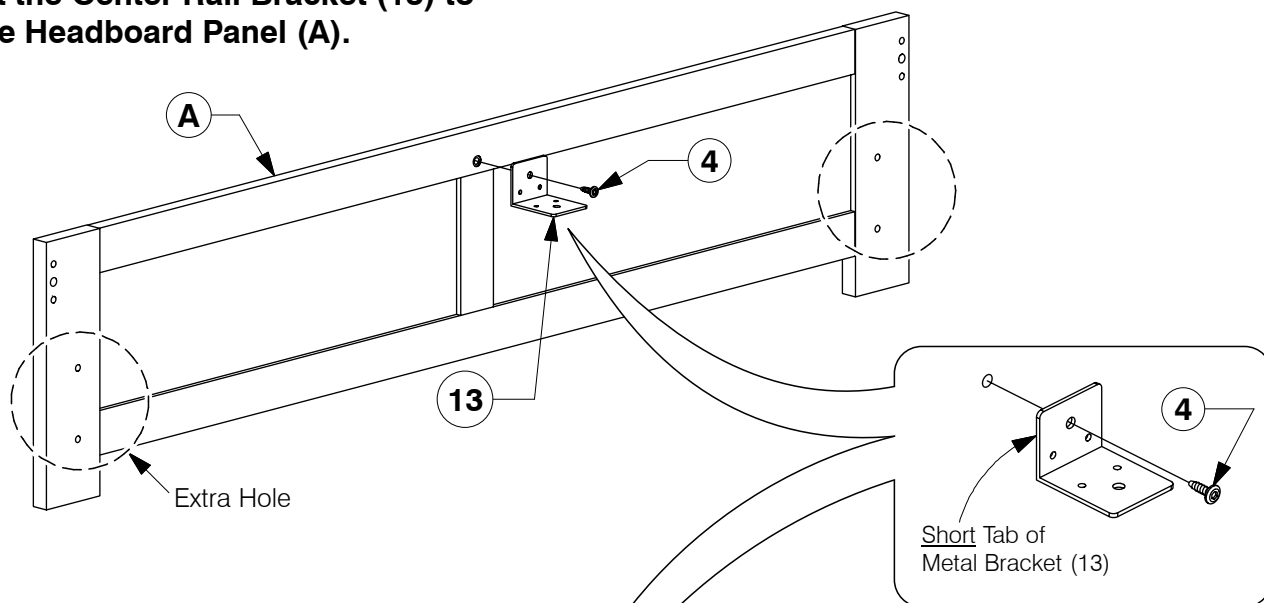

- 10** Fit the Center Rail Bracket (13) to the Footboard Panel (B).

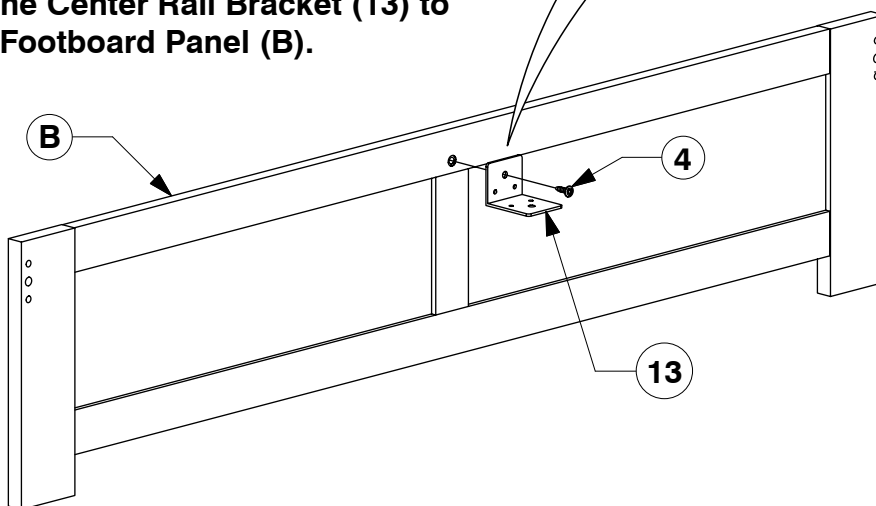


- 11** Assemble the Drawer Support Leg (J) to the Drawer Support Rail (K & M).

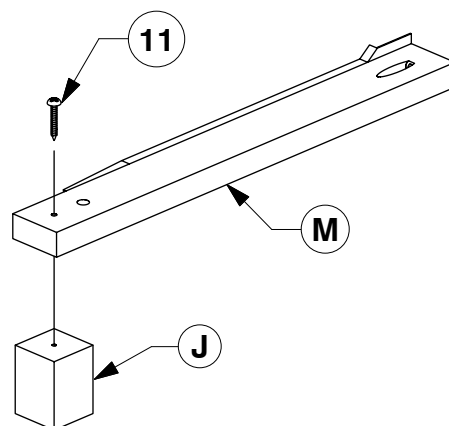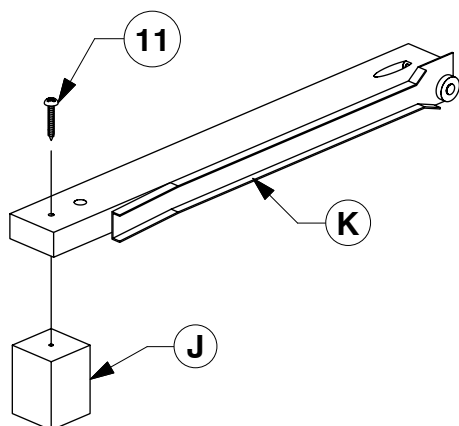


# Full Bed

## Assembly Instructions

- 12** Attach the Drawer Support Rail (K, L & M) to the Front Side Rail (D) using the Wood Dowels (6) and 32mm Wood Screw (11).

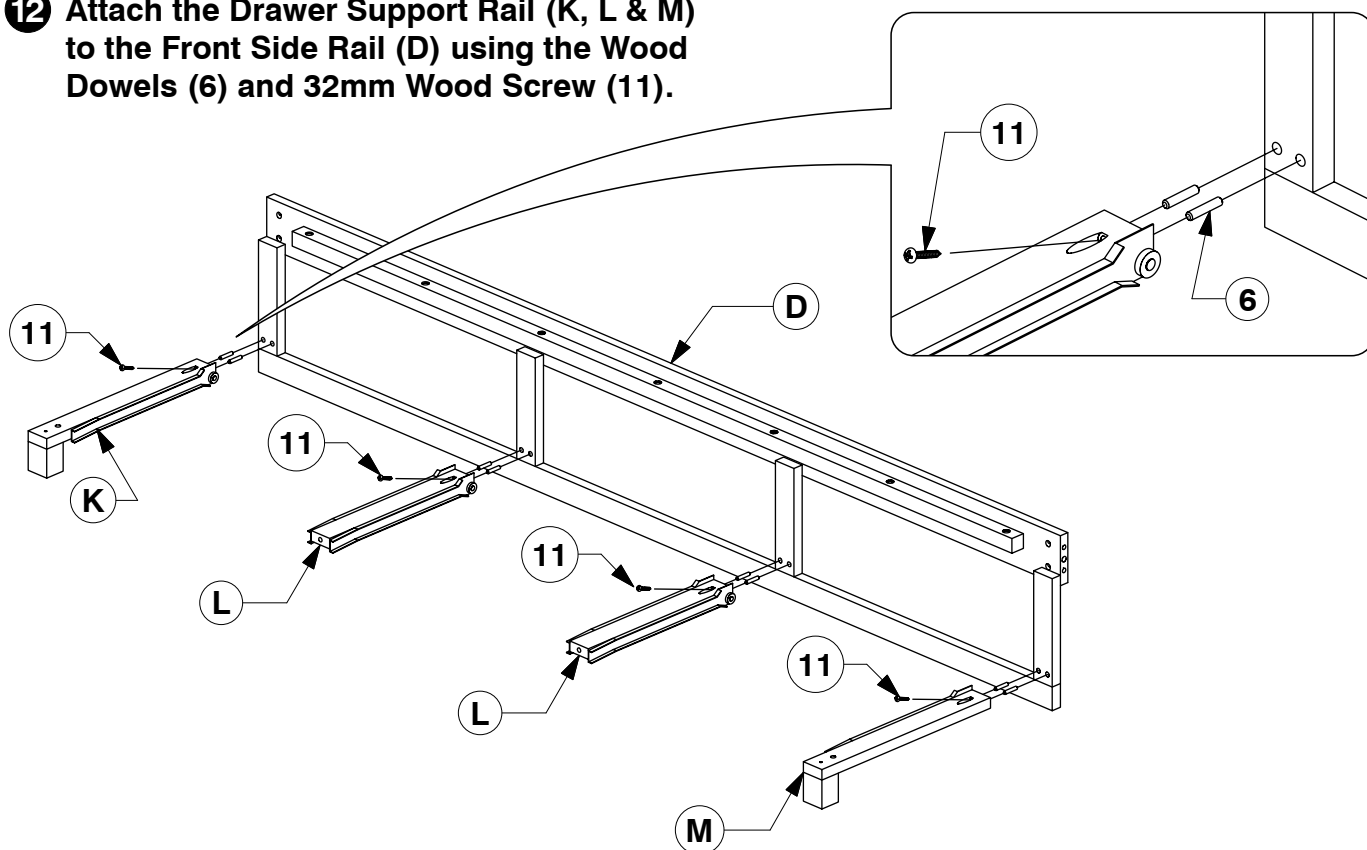


- 13** Bolt the Center Drawer Support (G) to the Drawer Support Rail (K, L & M).

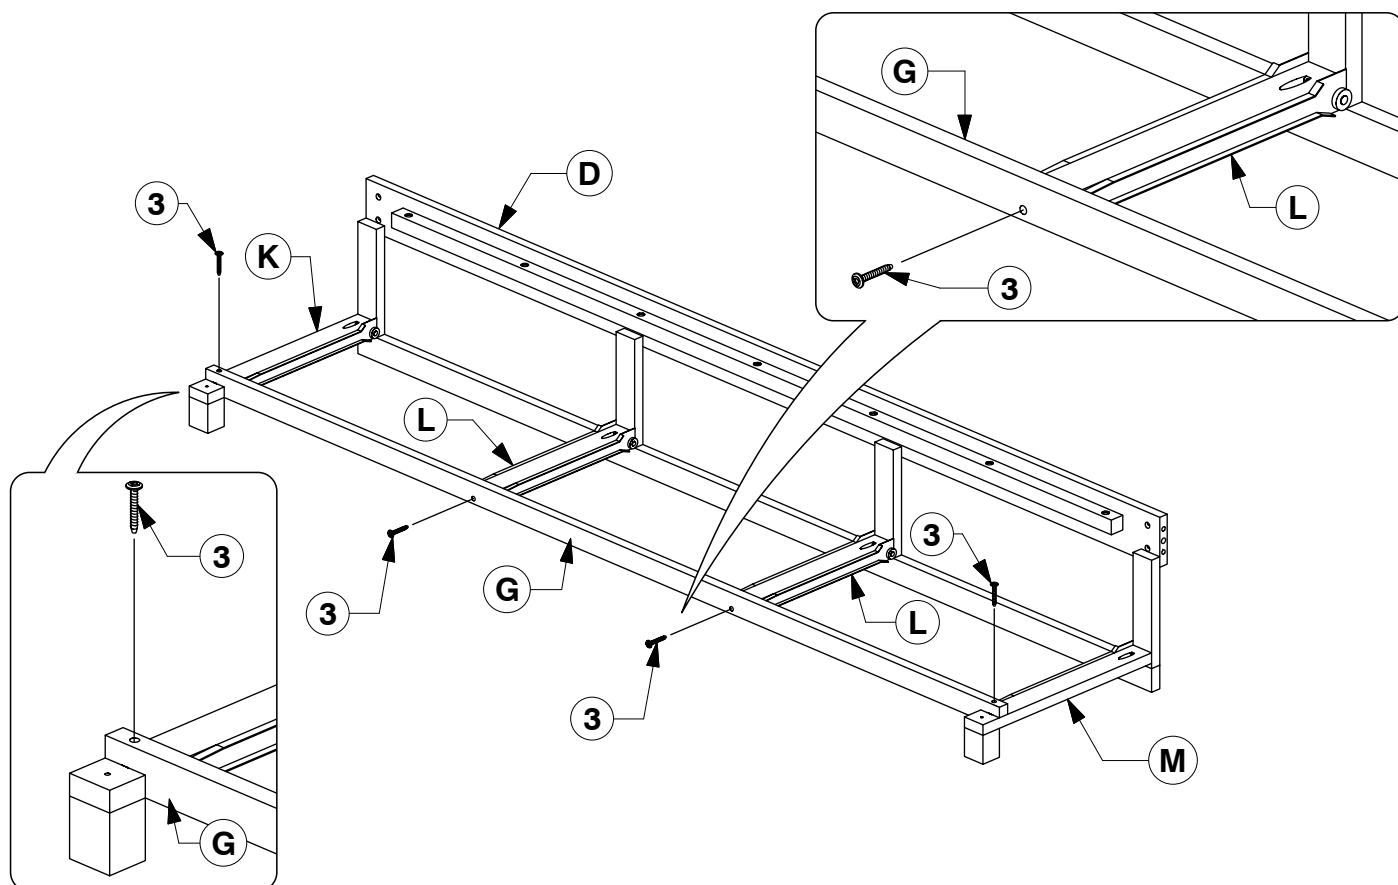


# Full Bed

## Assembly Instructions

- 14** Assemble the Side Rail (D & E) to the assembled Headboard Panel (A) and Footboard Panel (B).

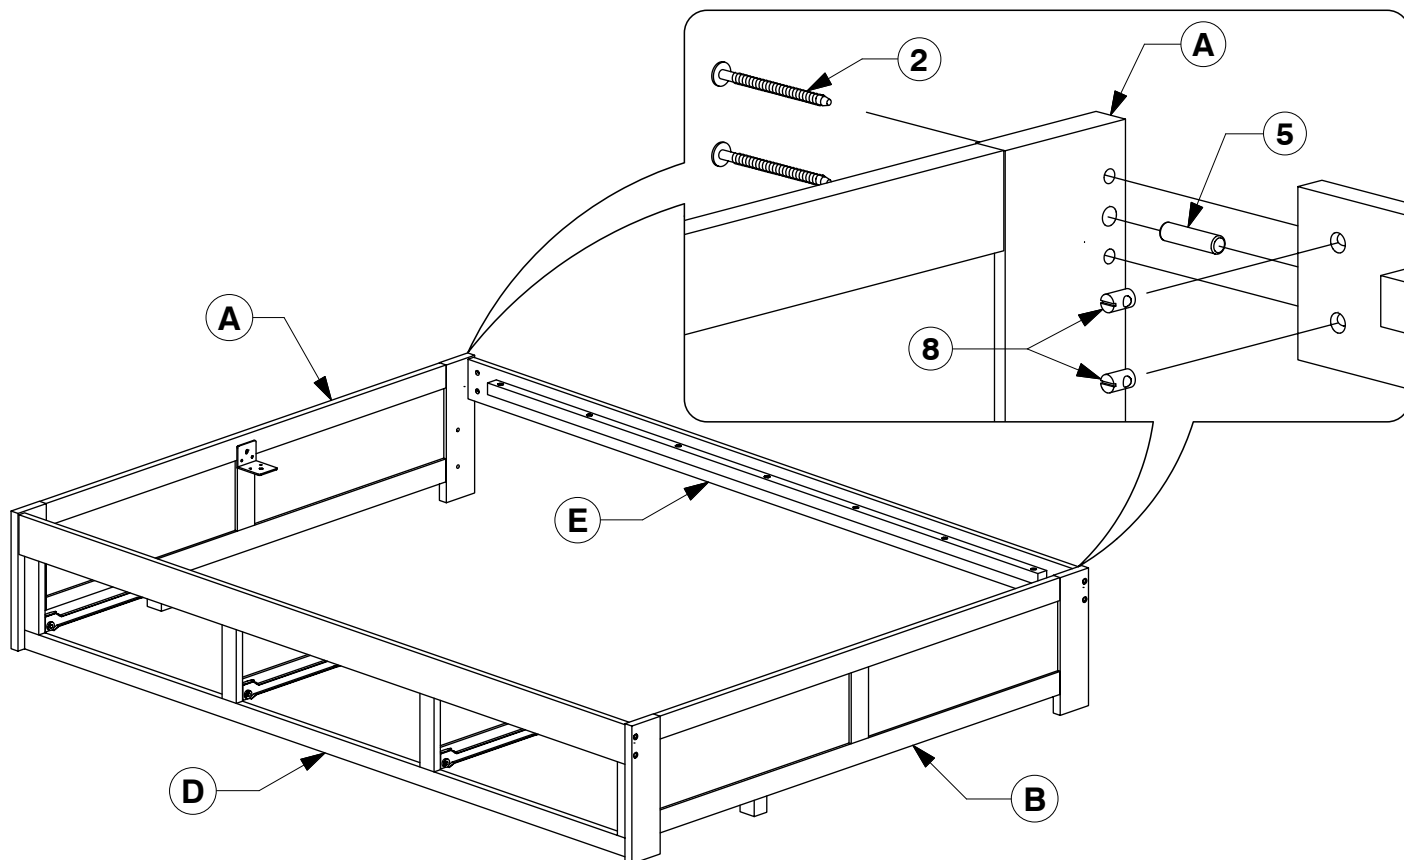


- 15** Bolt the Long Support (F) to the Center Rail Brackets (13) on the Headboard Panel (A) and Footboard Panel (B).

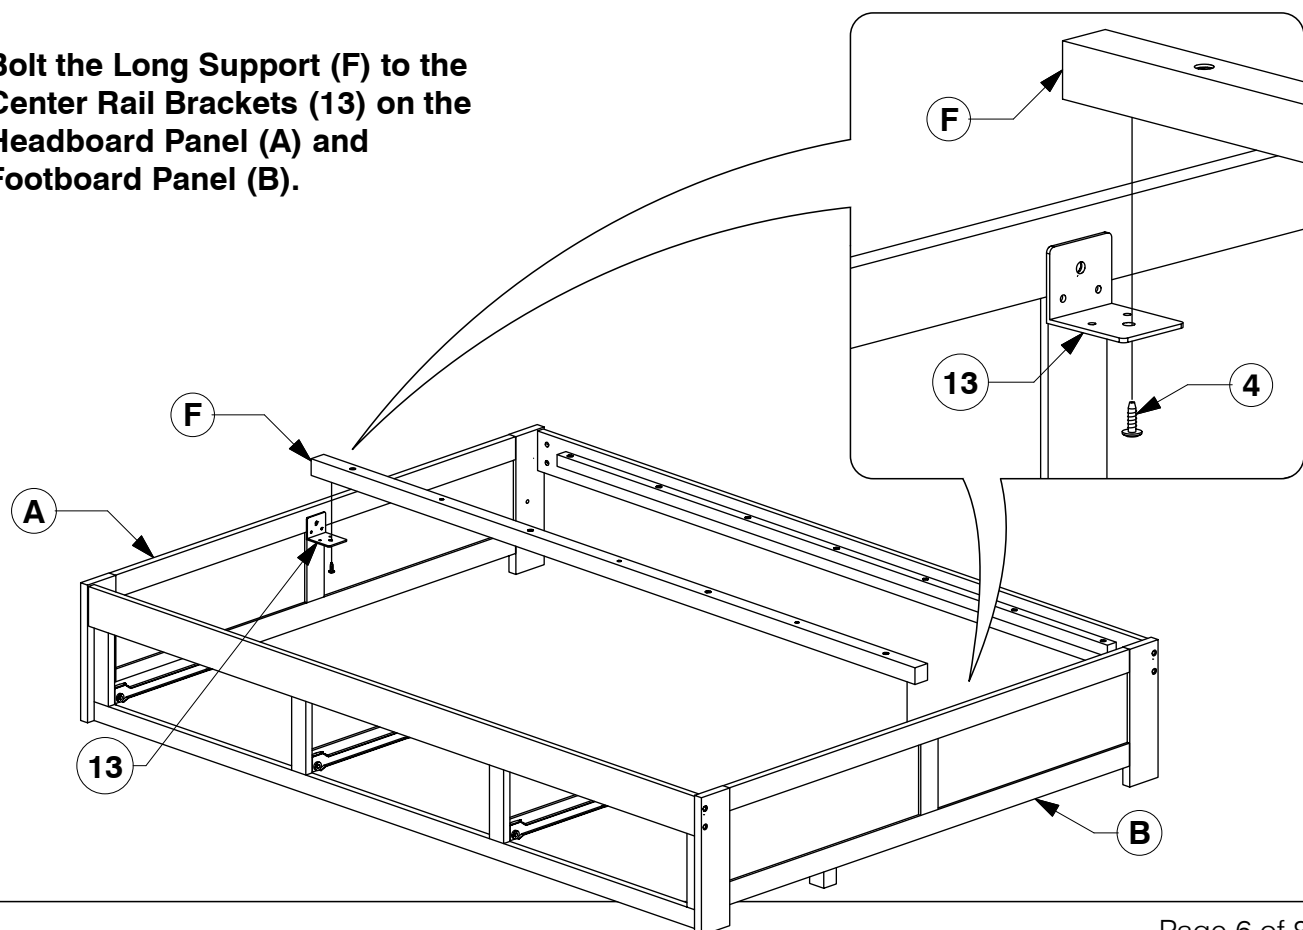


# Full Bed

## Assembly Instructions

- 16** Fit the first 3 Slats and assemble the Support Leg (H) to the Bed Slat (C). Bolt & screw the Bed Slats (C) to the Side Rail (D & E) & Long Support (F).

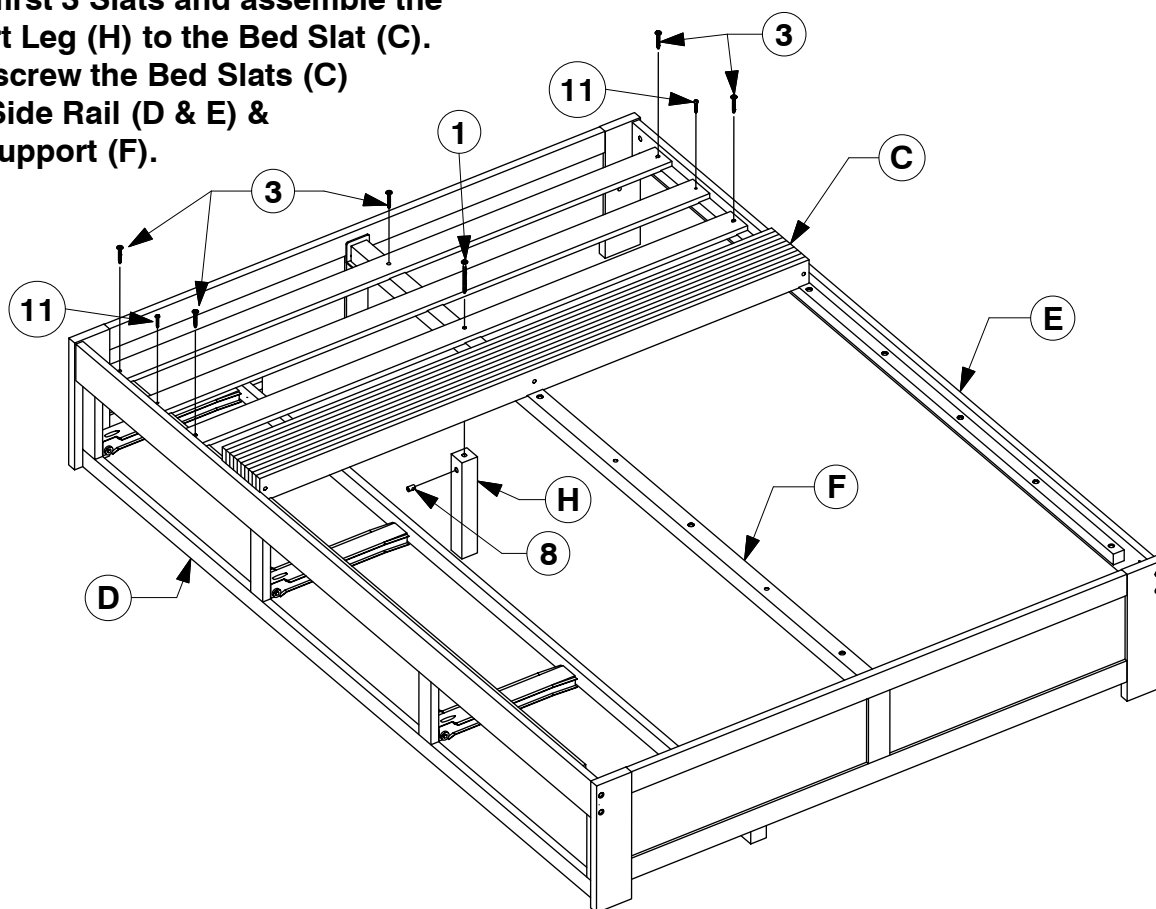


- 17** Fit the other Slats out and assemble the Support Leg (H) to the Bed Slat (C). Bolt & screw the Bed Slats (C) to the Side Rail (D & E) & Long Support (F).

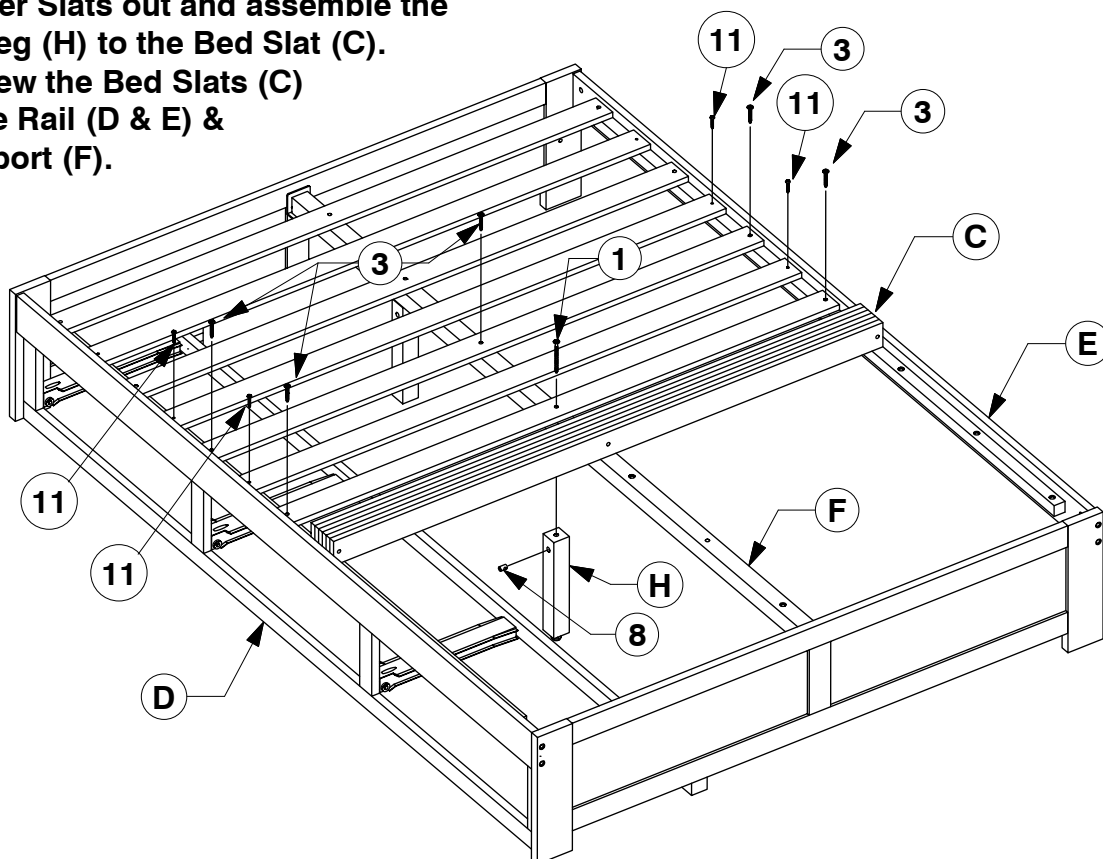

# Full Bed

## Assembly Instructions

- 18** Fit the other Slats out and assemble the Support Leg (H) to the Bed Slat (C). Bolt & screw the Bed Slats (C) to the Side Rail (D & E) & Long Support (F).

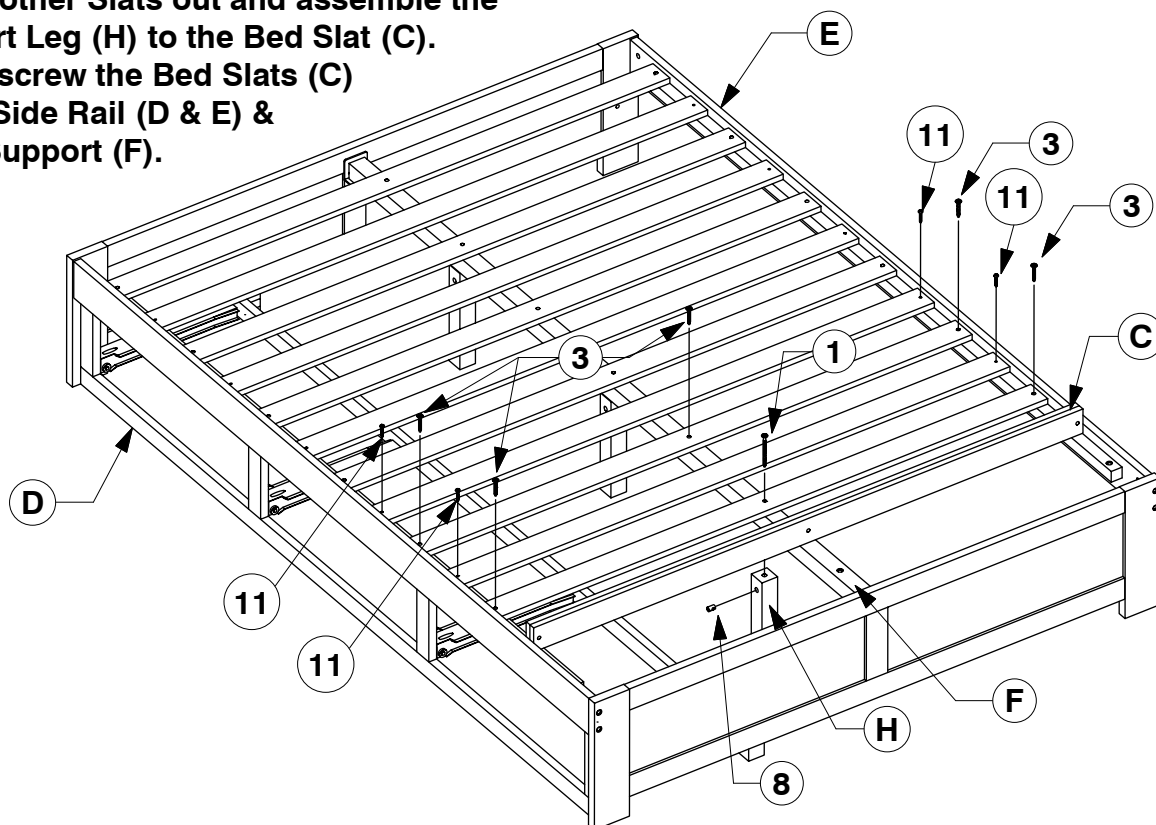

- 19** Bolt & screw the remaining Bed Slats (C) to the Side Rail (D & E).

Finally fit the assembled Drawers.

