
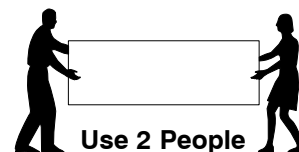


Daybed

Assembly Instructions

WIL-1118

1 Assembled View

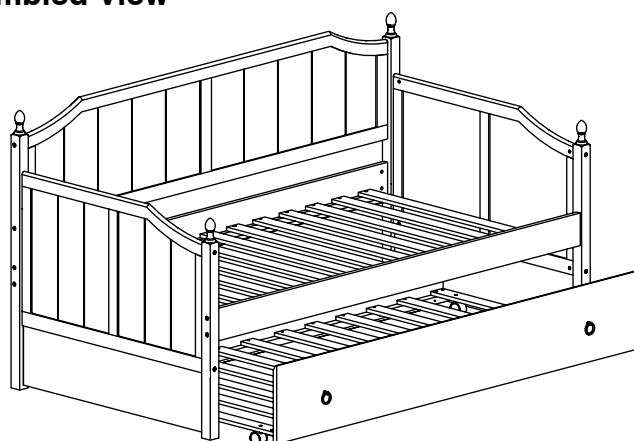


Use 2 People




Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts in this Box

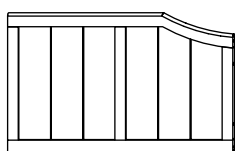


A Side Panel (Left Hand) x 1

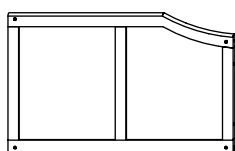


B Side Panel (Right Hand) x 1




C Bottom Panel x 2

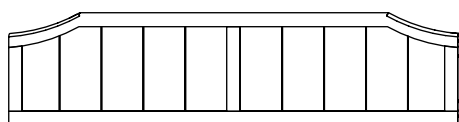

D Back Panel x 1



E Side Rail x 2

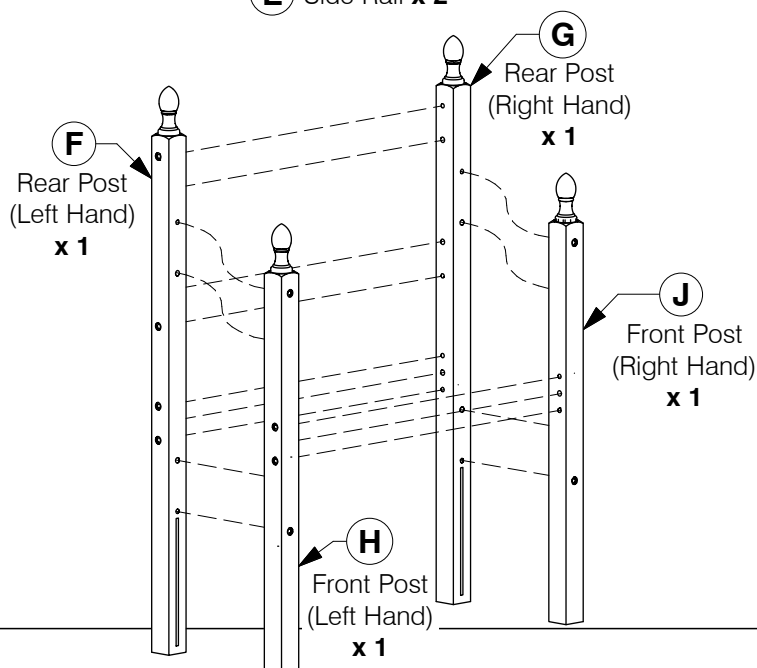


F Rear Post (Left Hand) x 1

G Rear Post (Right Hand) x 1

J Front Post (Right Hand) x 1

H Front Post (Left Hand) x 1

Slats are packed in separately in Box B

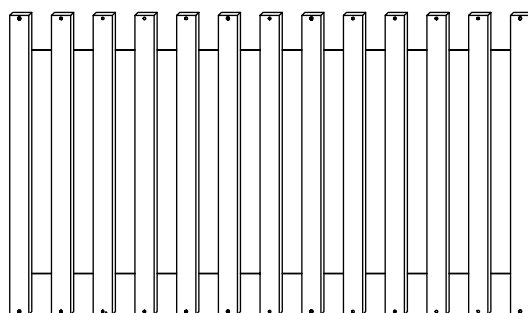

K Set of Slats x 1


3 Hardware in this Box




1 M6 x 90mm JCB x 20




4 Barrel Nut x 20



2 M6 x 40mm JCB x 8



5 Wood Dowel (10 x 40mm) x 16



3 Wood Screw (M4 x 32mm) x 18




6 Allen Key x 1

Daybed


Assembly Instructions

WIL-1118


- 4** Assemble the Rear Post (F/G) to the Side Panel (A/B).

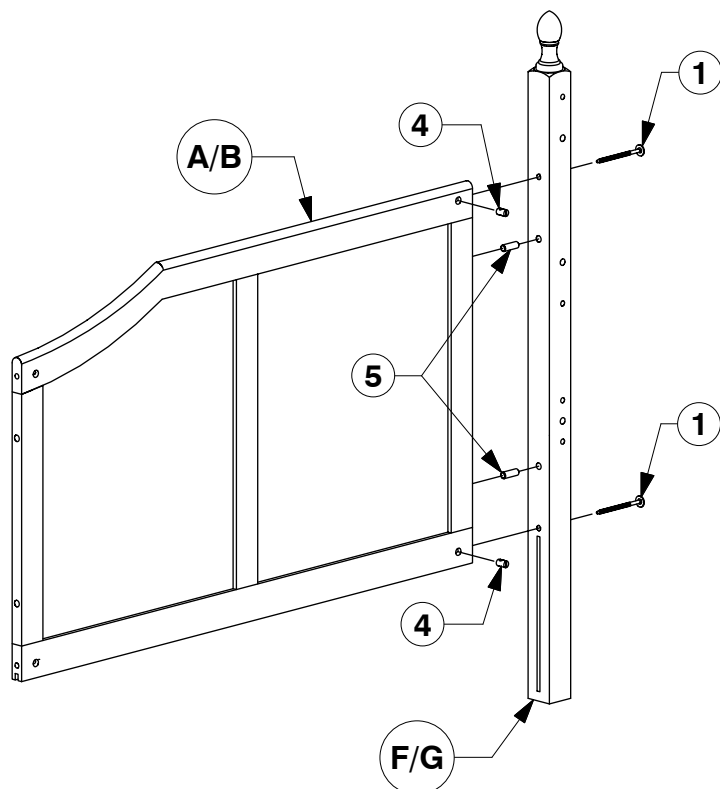

- 5** Slide the Bottom Panel (C) into the groove on the Side Panel (A/B) & Rear Post (F/G).

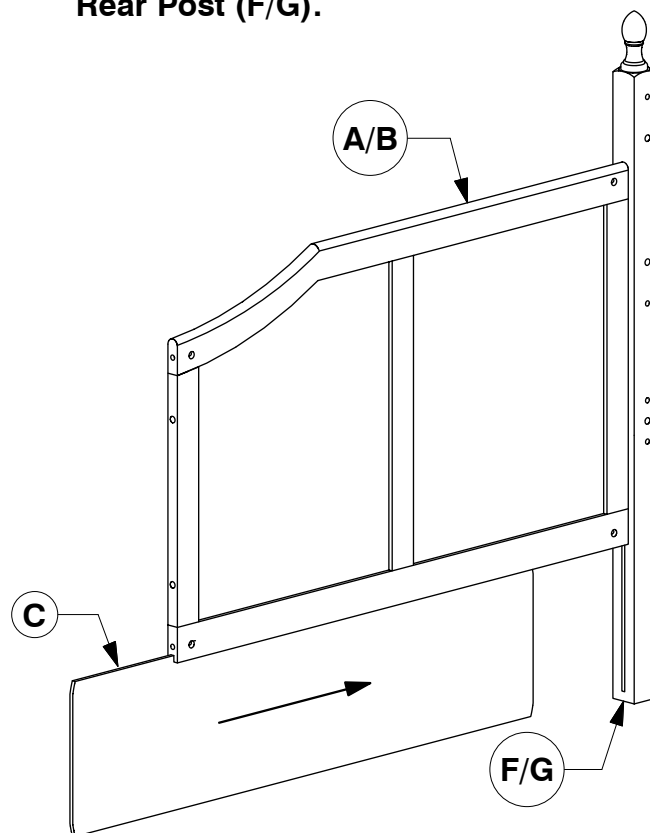

- 6** Assemble the Front Post (H/J) to the Side Panel (A/B).

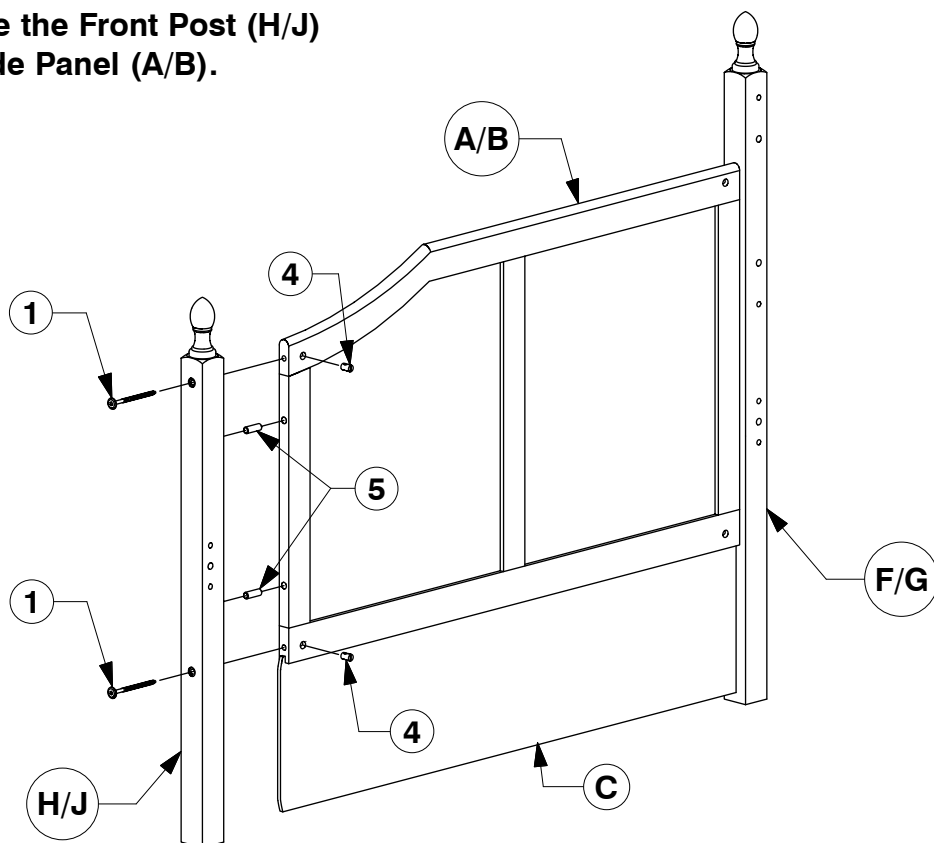


Daybed



Assembly Instructions

WIL-1118

- 7 Assemble the Side Panel (A & B) to the Back Panel (D) & Side Rail (E).**

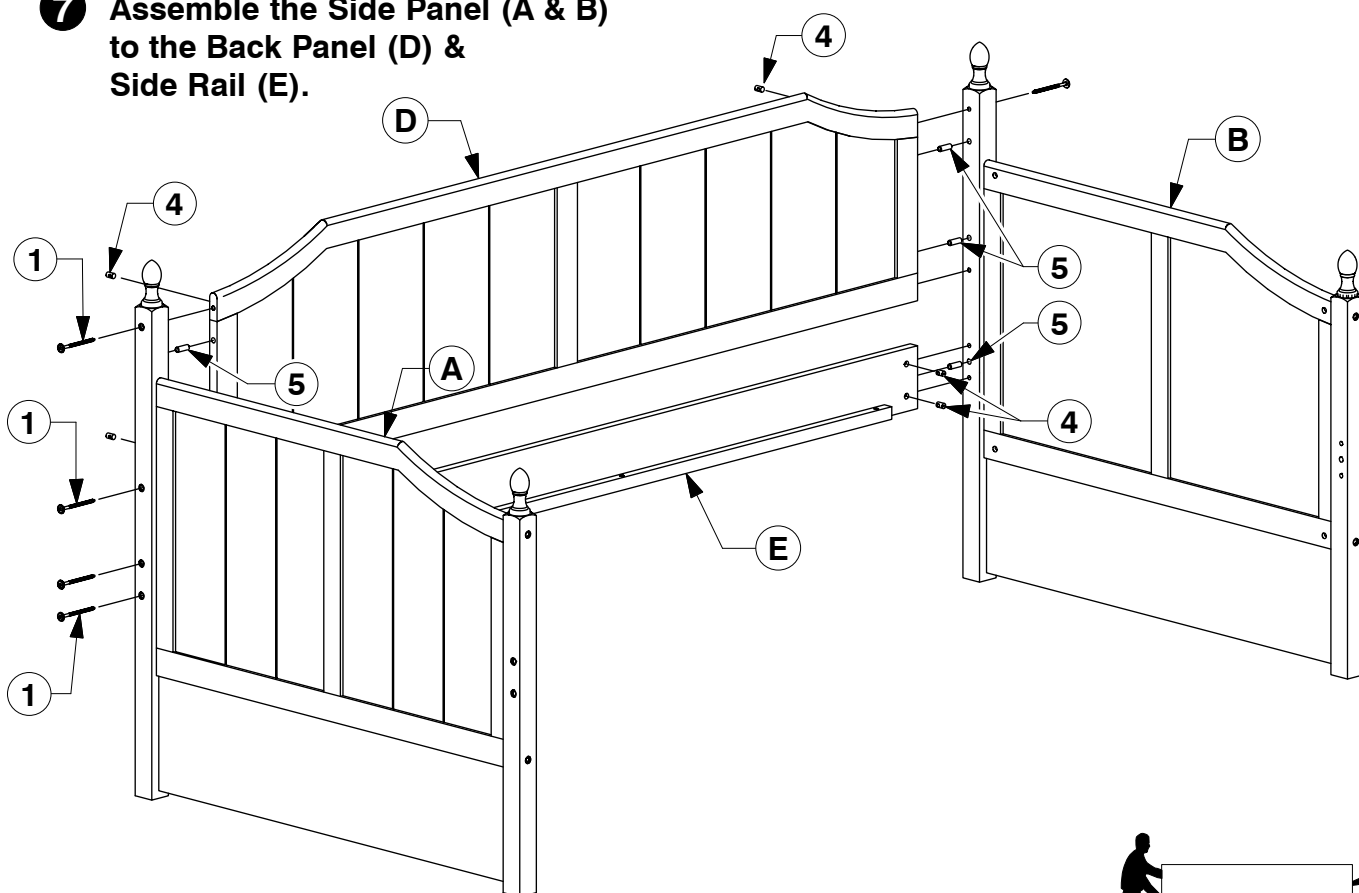

- 8 Assemble the Side Rail (E) to the Front Post (H/J).**

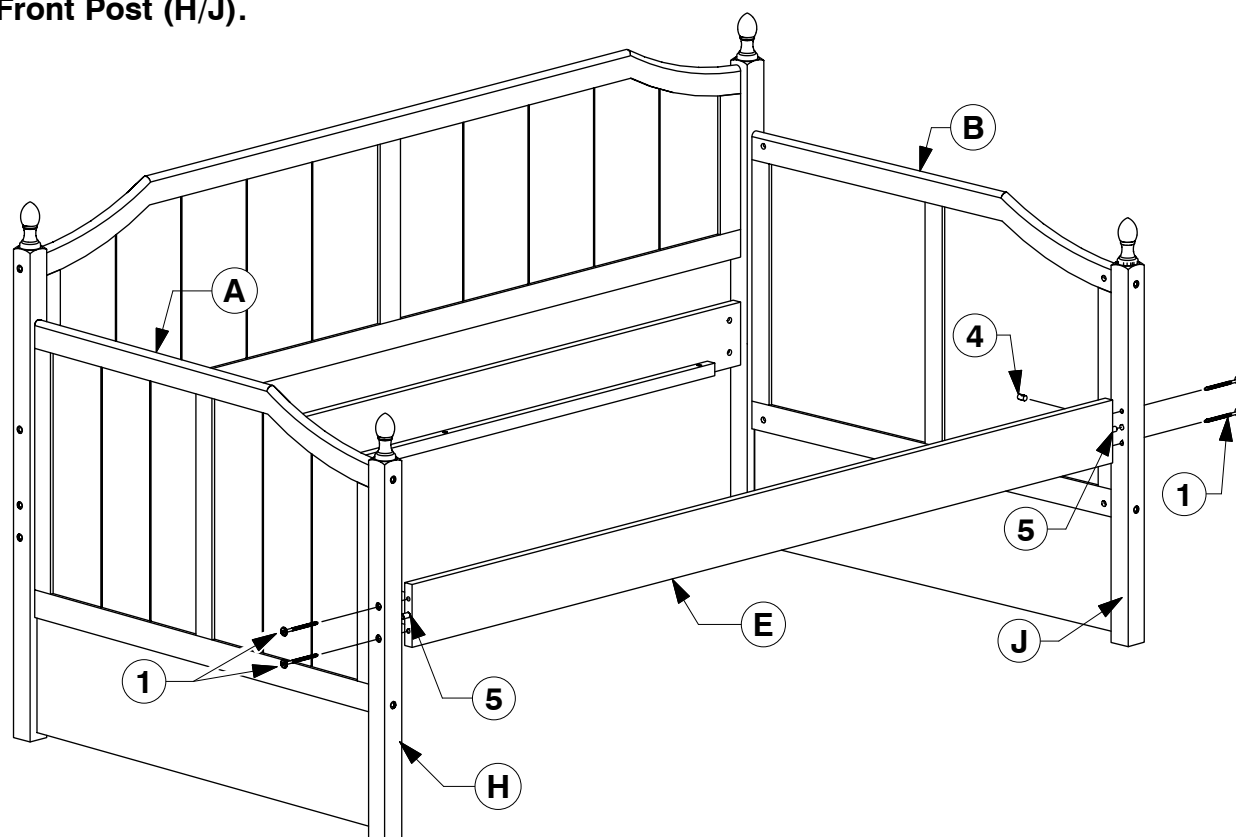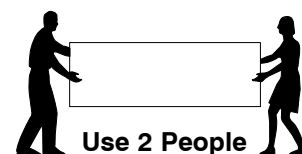


Daybed

Assembly Instructions

WIL-1118

- 9** Bolt the Set of Slats (K) between the Side Rail (E).

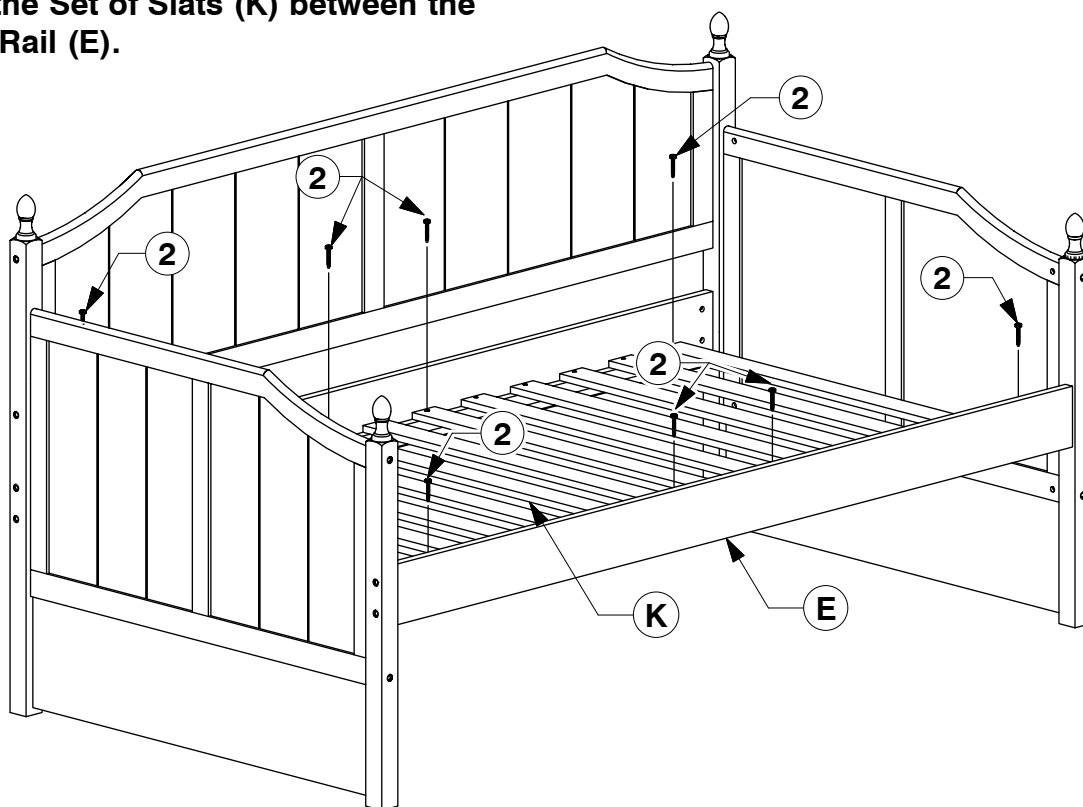

- 10** Screw the Set of Slats (K) between the Side Rail (E).
Finally, fit the assembled Trundle.

