
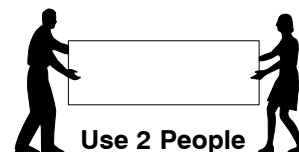


Full Bed

Assembly Instructions


WII-0419

1 Assembled View

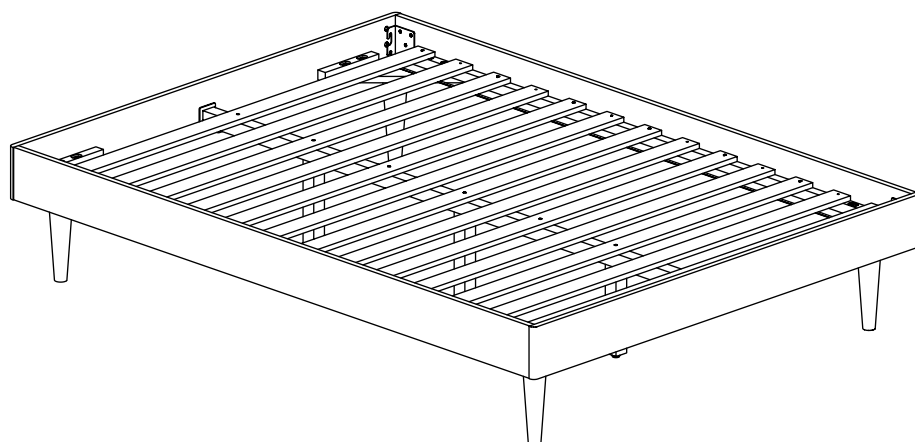


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts List

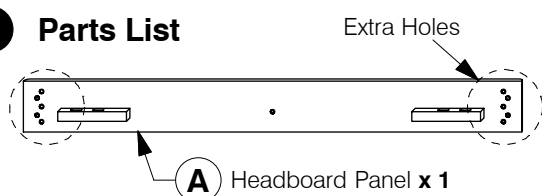

A Headboard Panel x 1



B Footboard Panel x 1



C Side Rail x 2



D Long Support x 1




E

Support Leg
x 3




F

Post
x 4



G

Support Panel
x 4

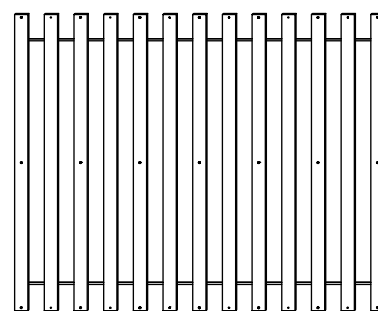

H Set of Bed Slats x 1


3 Hardware List




1 M4 Allen Key
x 1




2 M5 Allen Key
x 1



3 Center Rail
Bracket x 2



4 Adjustable
Foot x 3



5 Wood Screw
(M4 x 32mm) x 12



6 Barrel Nut
x 3



7 Spring Washer
x 30



8 Flat Washer
x 30



9 M6 x 15mm JCB
x 4



10 M8 x 50mm JCB
x 8



11 M6 x 20mm JCB
x 8



12 M6 x 40mm JCB
x 24



13 M6 x 50mm JCB
x 16




14 M6 x 100mm JCB
x 3

Full Bed


Assembly Instructions

WII-0419


- 4** Fix the Adjustable foot to the bottom of the Support Leg (E).

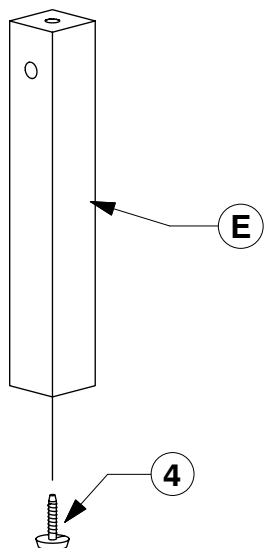


- 5** Fit the Post (F) to the Support Panel (G).

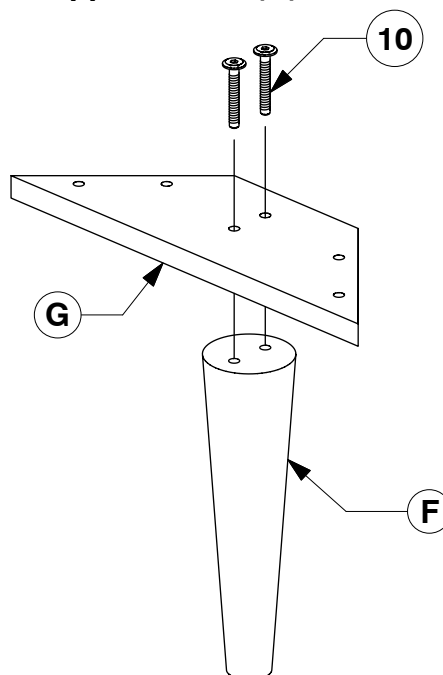

- 6** Fit the Center Rail Bracket to the Headboard Panel (A).

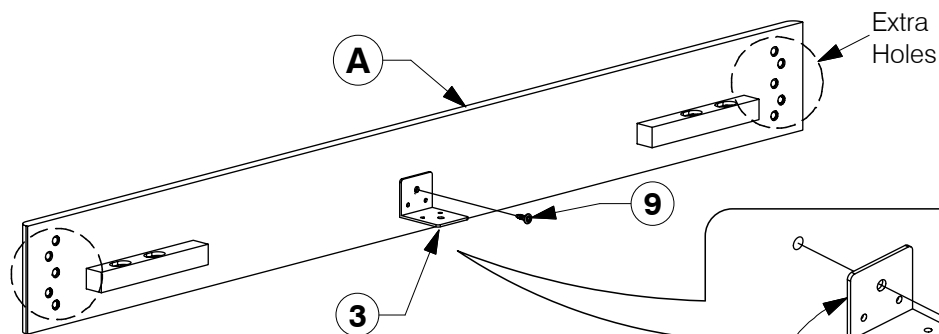

- 7** Fit the Center Rail Bracket to the Footboard Panel (B).

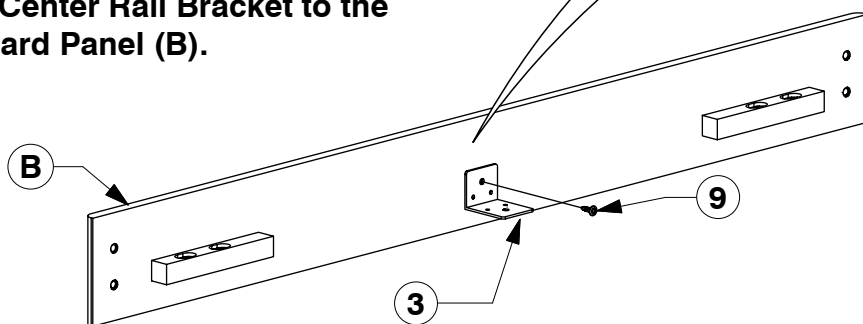


Full Bed


Assembly Instructions

WII-0419

- 8** Bolt the assembled Support Panel (G) to the Side Rail (C).

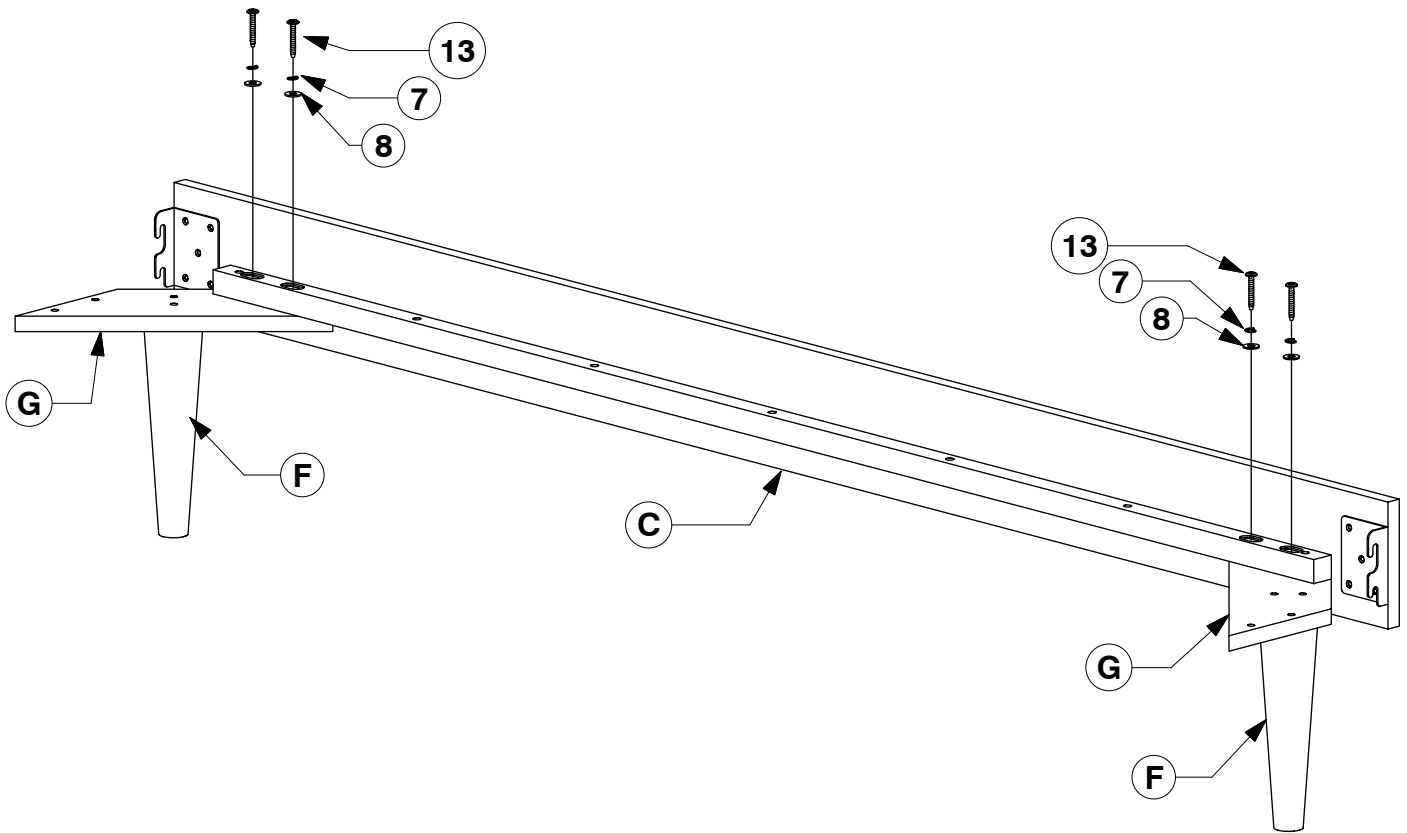

- 9** Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

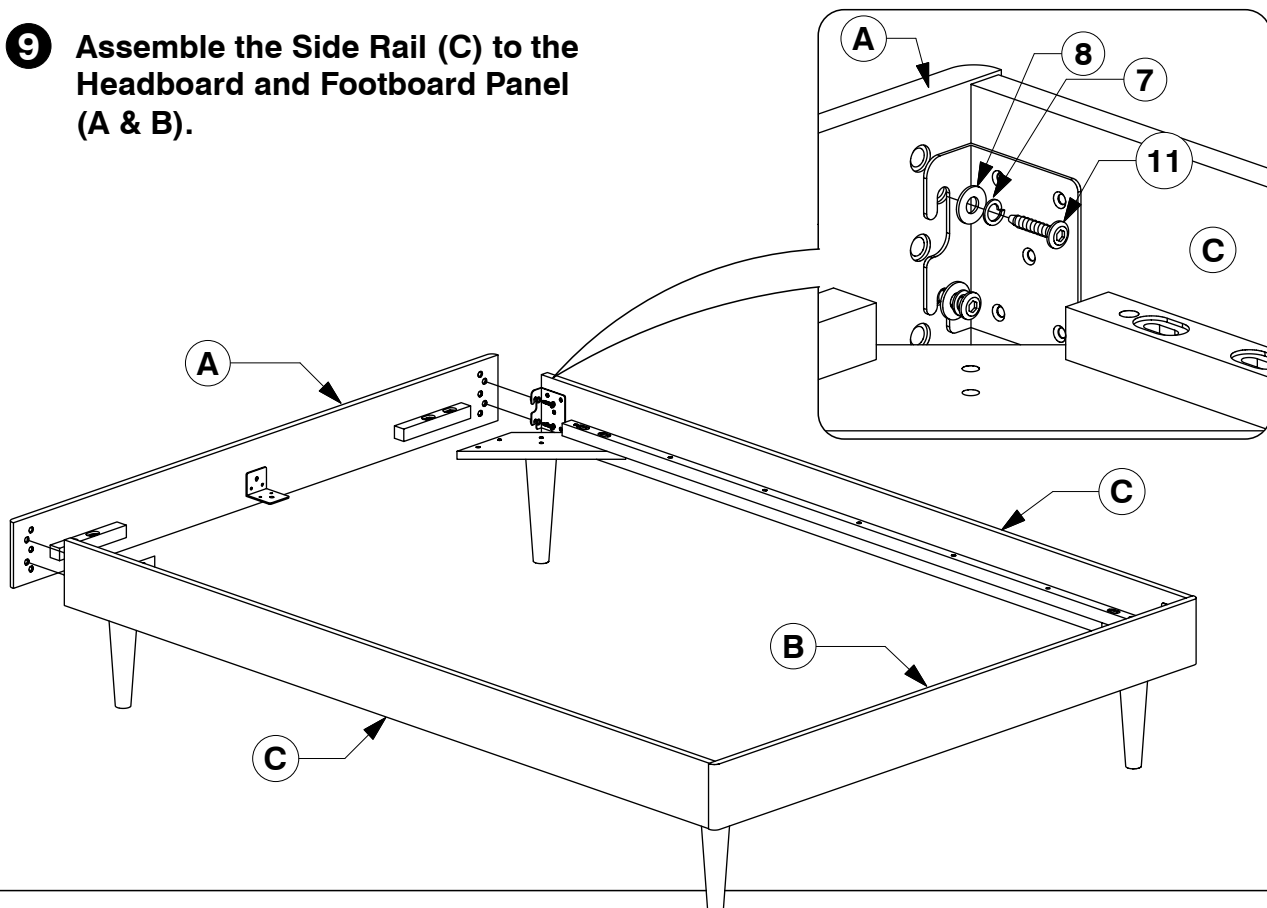


Full Bed


Assembly Instructions

WII-0419

- 10** Bolt the assembled Support Panel (G) to the Headboard and Footboard Panel (A & B).

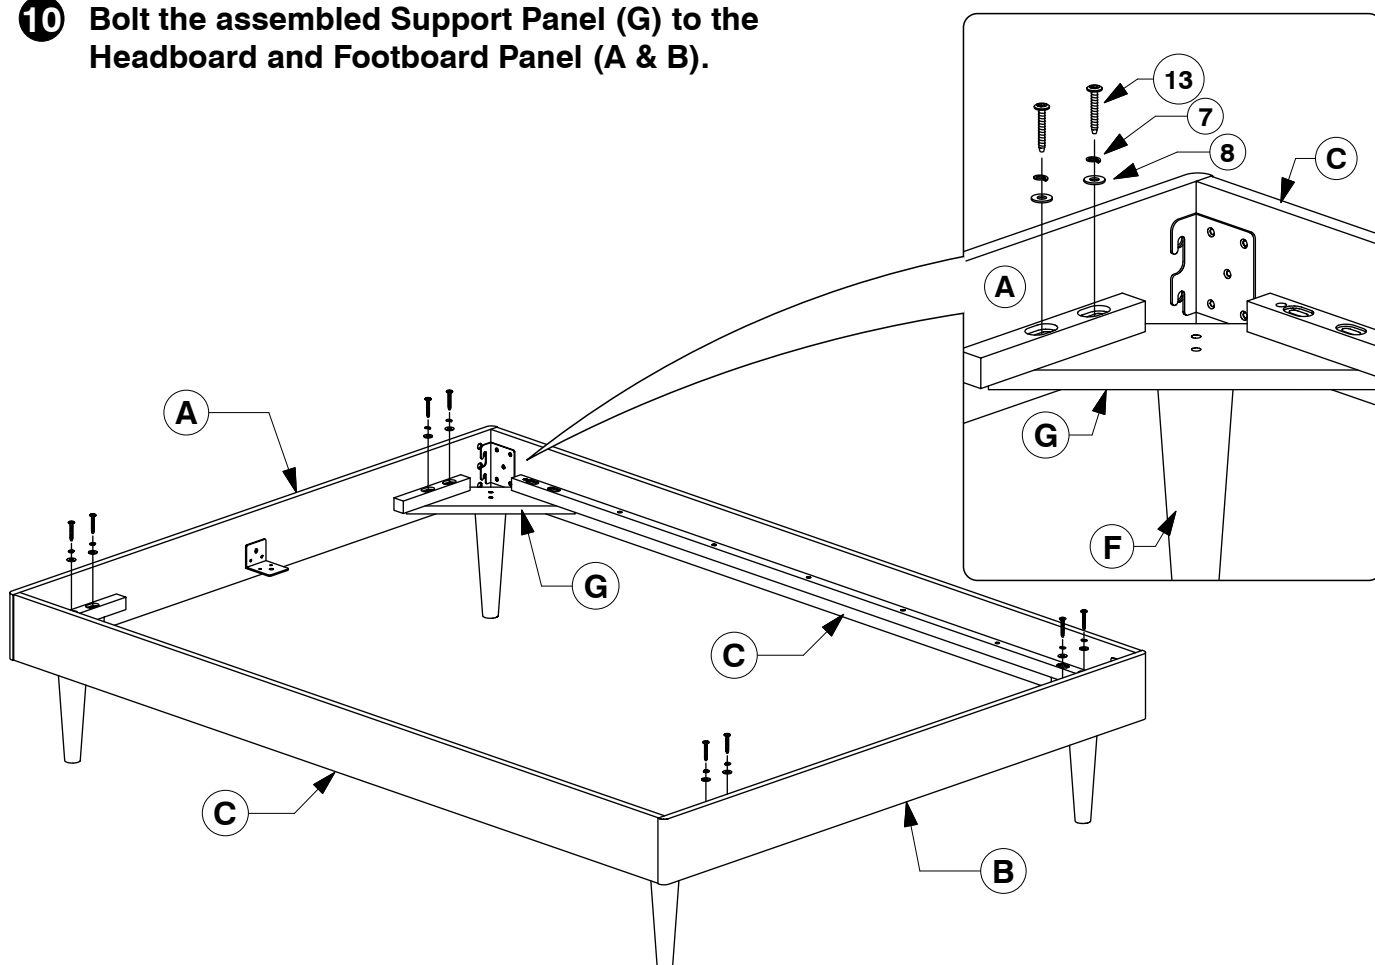

- 11** Bolt the Long Support (D) to the Center Rail Brackets (3) on the Headboard and Footboard Panel (A & B).

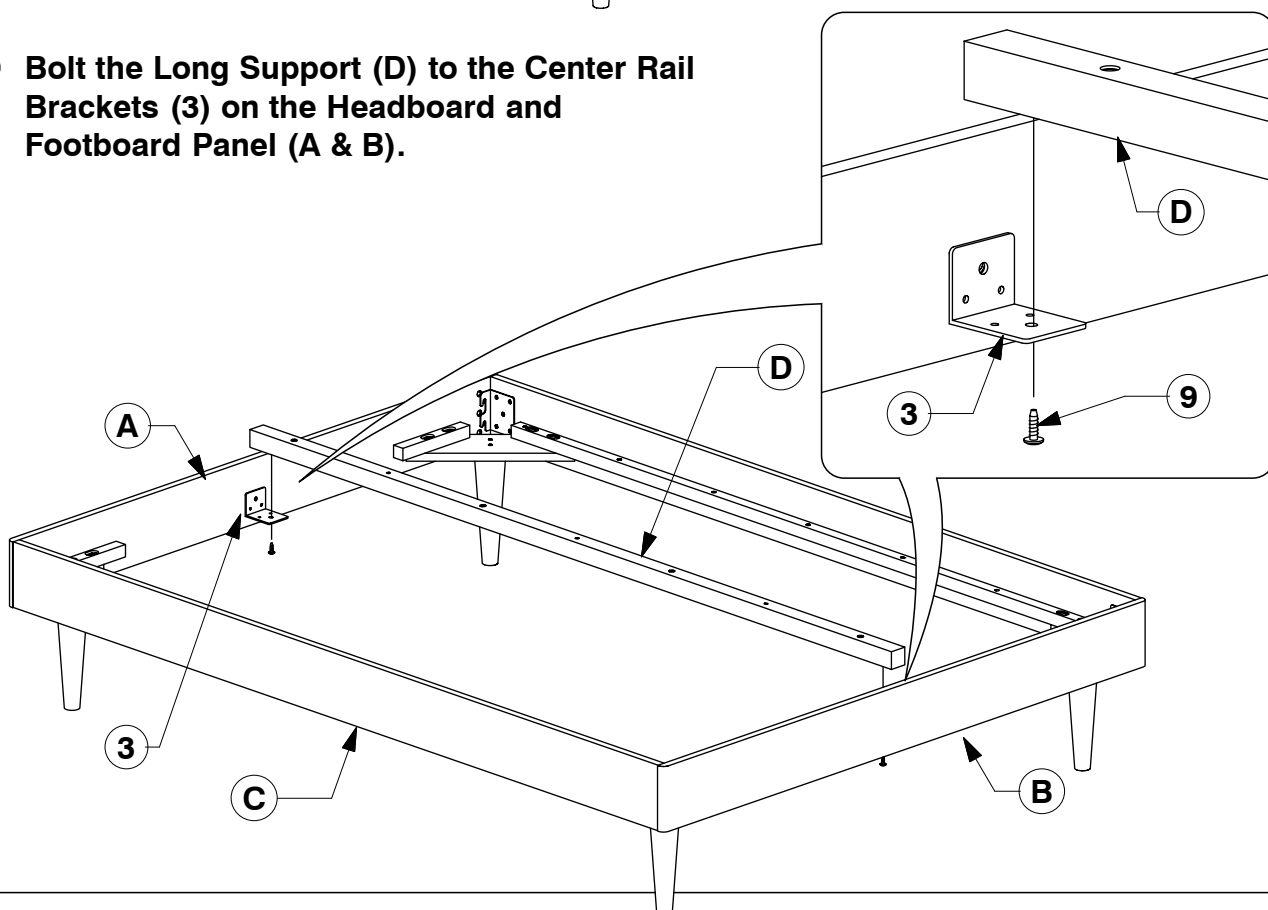


Full Bed


Assembly Instructions

WII-0419

- 12** Fit the first 3 Slats and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

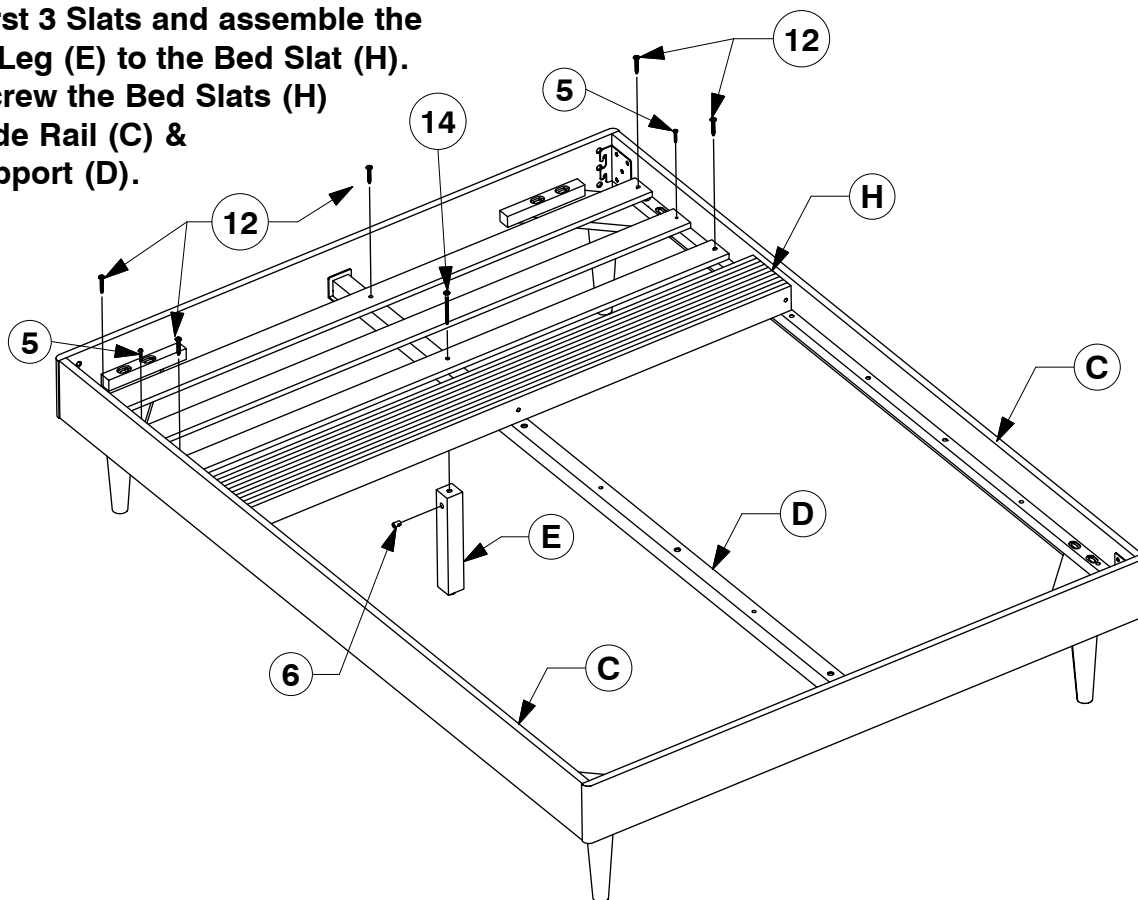

- 13** Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

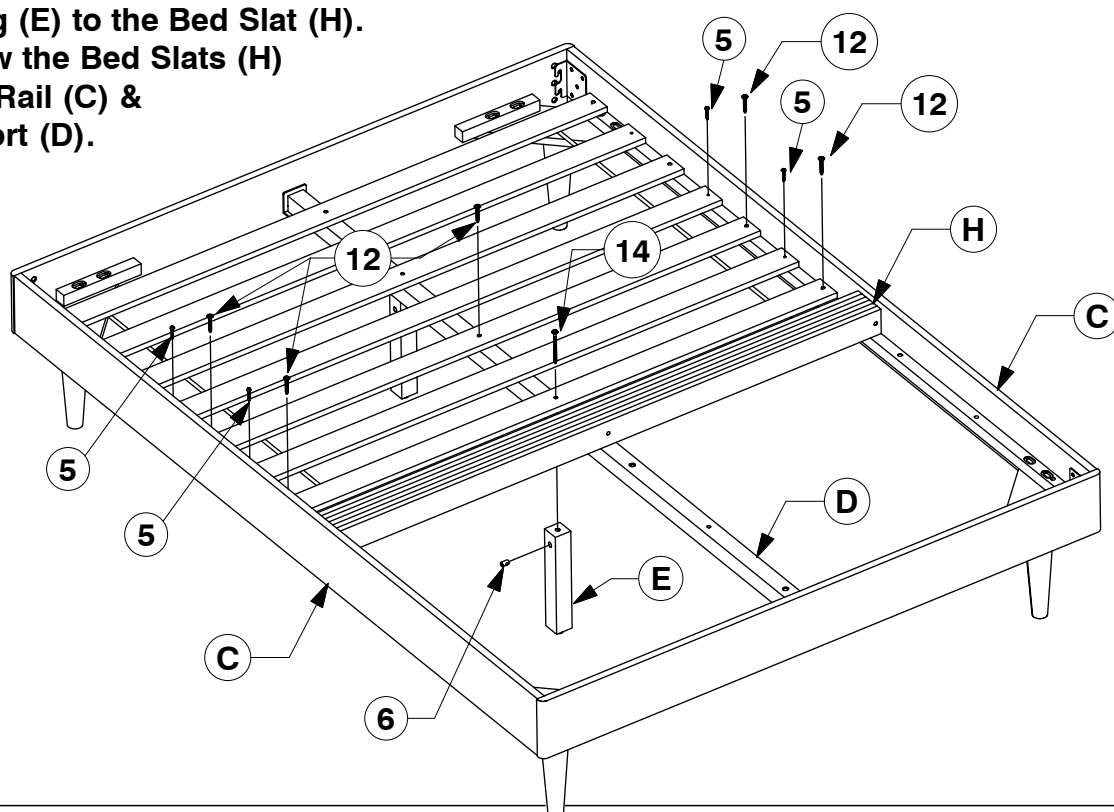


Full Bed


Assembly Instructions

WII-0419

- 14** Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) & Long Support (D).

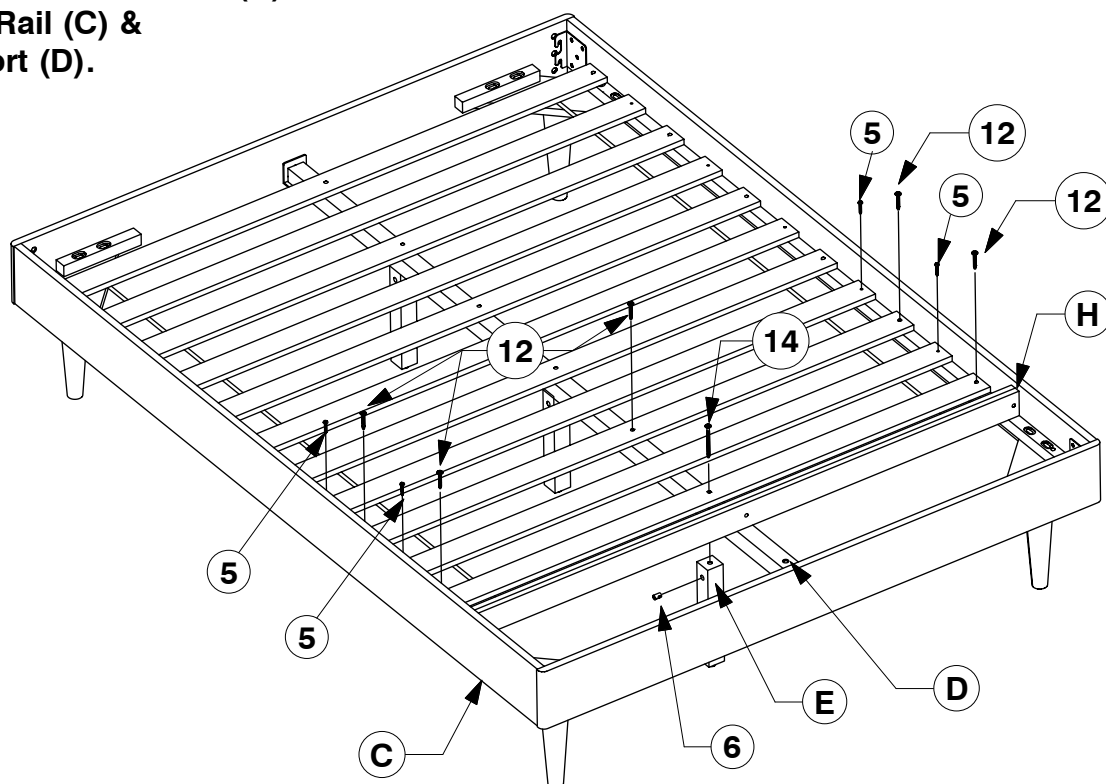

- 15** Bolt & screw the remaining Bed Slats (H) to the Side Rail (C).


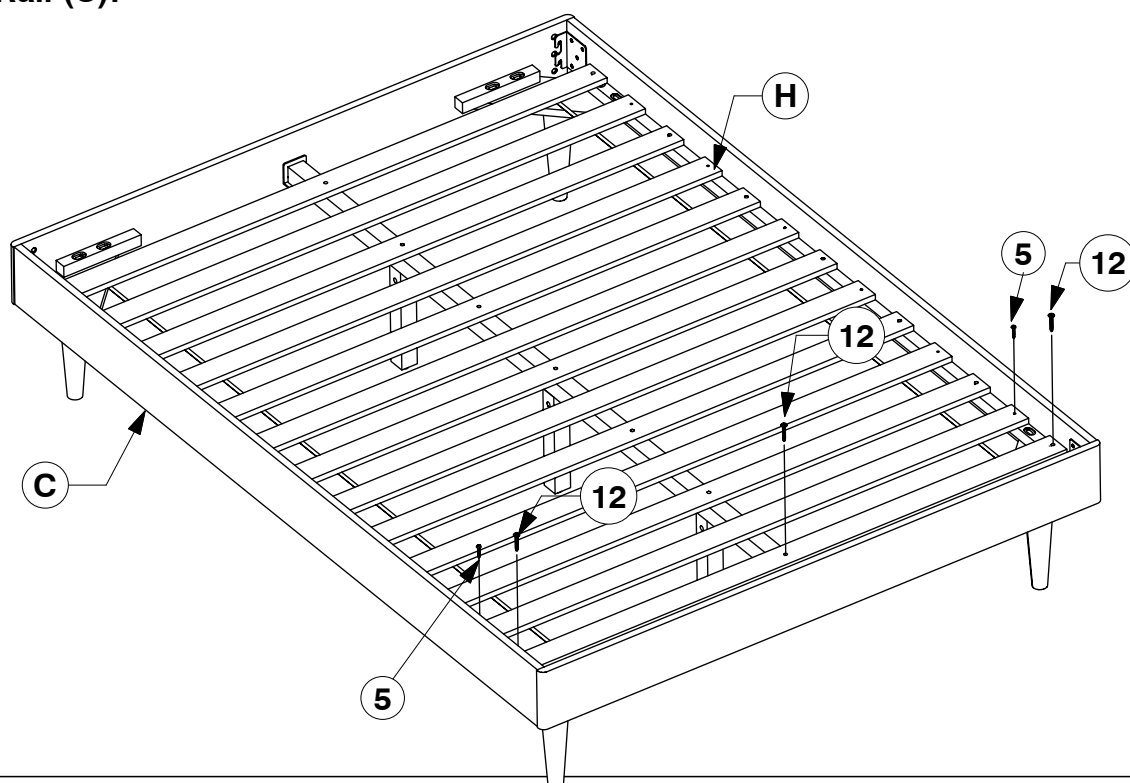


Full Headboard

Assembly Instructions

WII-0419

1 Parts List

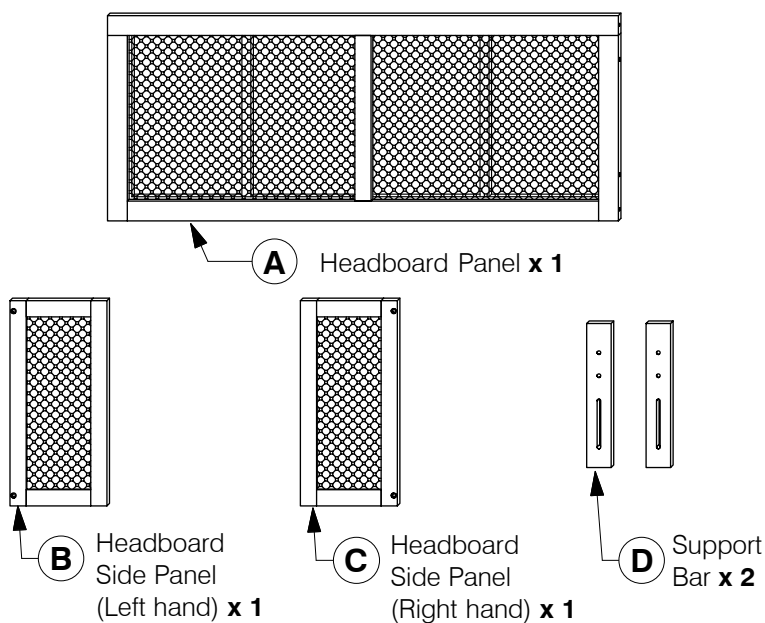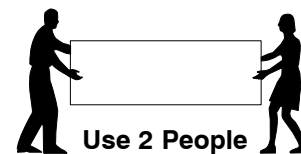


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Hardware List



1 M6 x 60mm JCB x 4



2 M6 x 35mm JCB x 4



3 Barrel Nut x 4



4 Wood Dowel (M10 x 40mm) x 4



5 Spring Washer x 4




6 Flat Washer x 4



7 M4 Allen Key x 1

3 Fit the Headboard Side Panel (B & C) to the Headboard Panel (A).

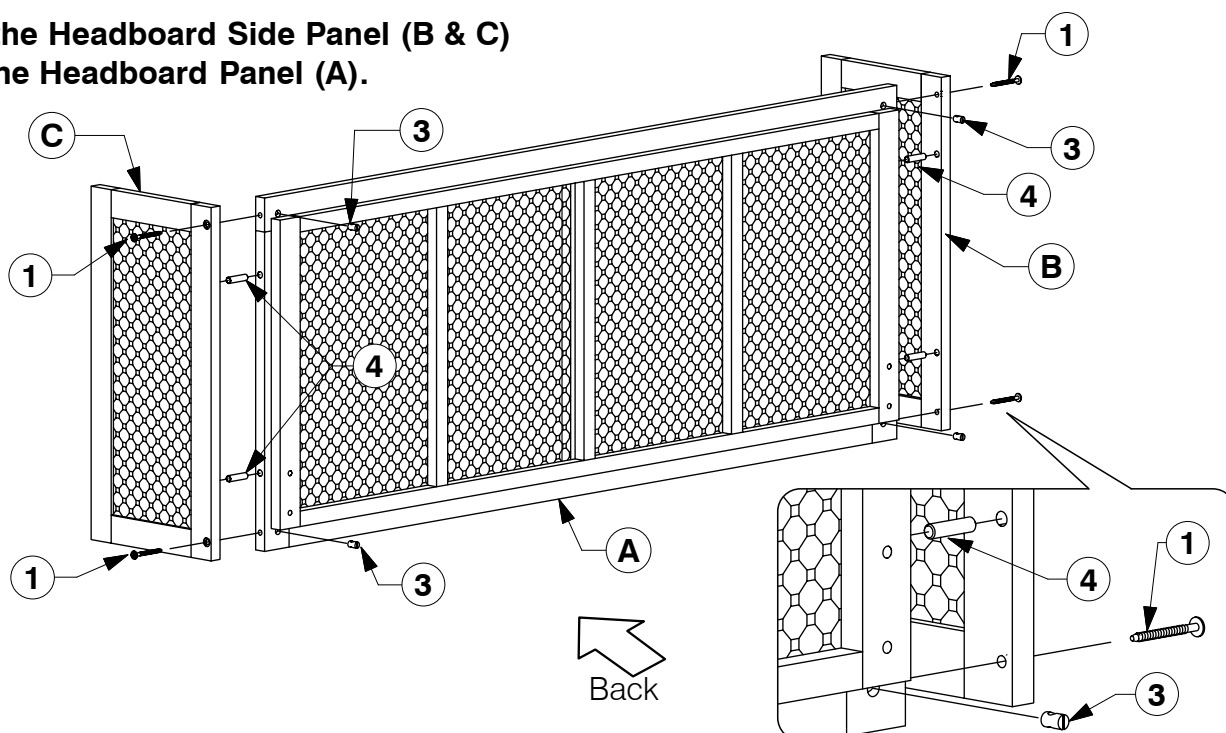

Full Headboard


Assembly Instructions

WII-0419

4 Assemble the Support Bars (D) to the Headboard Panel.

✓ Footboard, Rails & Slats are packed in separate Boxes with Bolts.

Note: Bolts & Washers from Footboard, Rails & Slats Box.

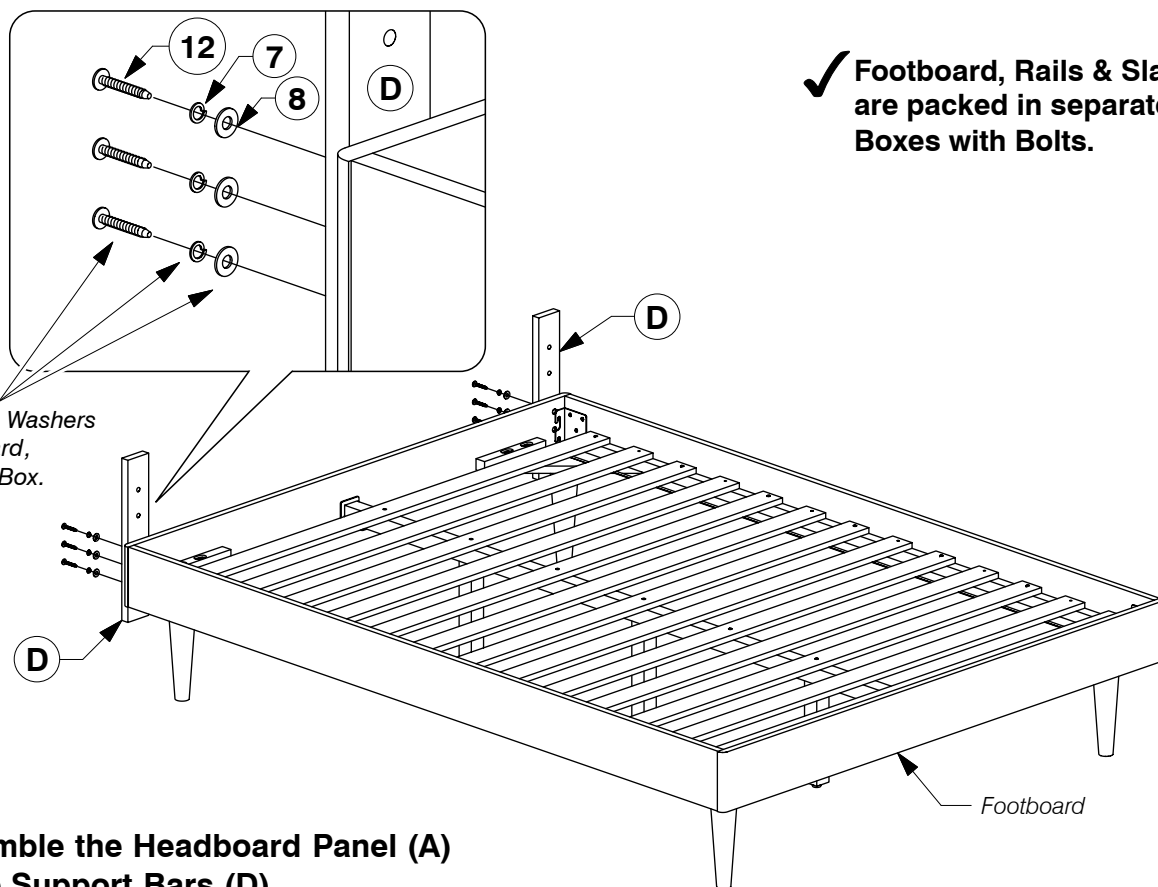

5 Assemble the Headboard Panel (A) to the Support Bars (D).

