



Wall Base

INSTALLATION & MAINTENANCE

160 South Industrial Blvd.
Calhoun, GA. 30701
MohawkGroup.com

Technical Services Department
508 East Morris St.
Dalton, GA 30721
800.833.6954
product_tech@mohawkind.com



General

The wall surface must be thoroughly dry, smooth, and free from dirt, wallpaper, vinyl wall covering, grease, old adhesives, and other extraneous material. DO NOT apply directly over outside walls in contact with earth (such as unfurred basement walls) or over ceramic tile, metals, or other impervious surfaces because poor adhesion may result.

Maintain the wall base, adhesive, and room air at a uniform temperature of at least 70°F for 24 hours prior to, during, and 48 hours after the installation. Rolled wall base should be unrolled and allowed to lie flat for 24 hours prior to the installation to regain its normal shape.

Use only M45 wall base adhesive carefully following the directions on the container label. THE USE OF ANY OTHER ADHESIVE WILL VOID MOHAWK GROUP'S WARRANTY.

Installation Of Base

1. Spread the adhesive using a 1/8" x 1/8" x 1/8" V-Notch trowel, or using a tube applicator tip.
2. The adhesive may be spread on the wall surface or on the back of the wall base.
3. Immediately place the wall base into position while the adhesive is freshly applied.
4. Roll the entire strip of base with a small roller in the direction of the previously placed strip (Figure 1).
5. Wipe smudges and clean spills quickly before the adhesive dries. Use a clean cloth dampened with water.
6. Clean tools with water while the adhesive is still wet.
7. Dried adhesive may require the use of a solvent (odorless mineral spirits.)

If the wall or floor surface is uneven, it may be necessary to trim the edges before installing adjoining pieces of base. Use a razor-type utility knife, cutting the wall base from face to back.



Figure 1

Corners

Outside and inside corners can be formed easily from standard 4 foot lengths or rolls.

1. Using a pen or pencil, mark the base of the base using the wall as a guide. This will give you the correct contour of the wall.
2. Fold the wall base at the line, face in, and shave the back of the wall base while folded (Figure 2), removing the line and approximately 1/8" of base material on either side of it. If you are using a topset gouge to make these cuts, turn the base face down and make your cut starting at the top and working down to the bottom (Cut #1). Note: Always gouge on the side of the line in the direction the base will be going. Important: The depth of this area at its deepest point should not exceed 20% of the base thickness.

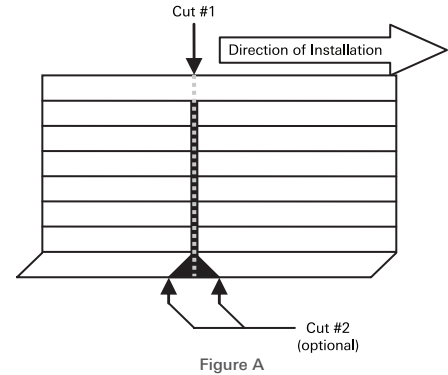


Figure 2




3. To ensure that the toe sits flush against the floor, the initial cut (Cut #1 – Figure A) can be widened on either side of the line (Cut #2 – Figure A) near the bottom of the base, though this cut is optional. Make the cut (gouge) downward, widening the initial cut to approximately one half inch at the bottom. This will ensure there is no pressure of the toe against the floor surface.

- **Note:** The next two steps must be completed before continuing to Step 5.
 - Use a hot air blower to heat the shaved area. Apply heat carefully because excessive heat will blister or deform the base.
 - Fold base with face out where corner will occur and roll with hand roller (Figure 3).
4. Pull up on the toe and turn it inside out. Position the base after applying adhesive and set into place allowing the toe to drop down to form a perfect corner.
 5. Roll thoroughly or firmly press corner against wall.
 6. Cool by placing a wet cloth against corner. Wipe dry.
 7. Remove excess adhesive.



Inside Corners (Suggested Method)

1. Draw a line on the back of base where corner will occur.
2. Using a straight edge as a guide, lightly cut along line from top to bottom of base to a depth of approximately 20% of the base thickness.
3. Cut a small 90° triangular wedge (45° off center) to remove toe of cove base at line (Figure 4).
4. Use a hot air blower to heat the back of the base along the score line. Apply heat carefully because excessive heat will blister or deform the base.
5. Fold base at mark with face in. While base is still warm apply adhesive and press base into corner. Carefully push the toe of cove base against the wall to close the triangle (Figure 5).
6. Promptly roll base.
7. Cool by placing a wet cloth against corner. Wipe dry.
8. Remove excess adhesive.

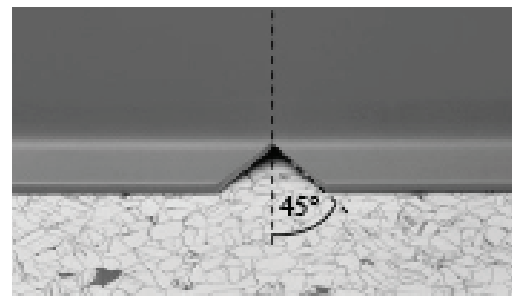



Inside Corners (Optional Method)

1. When you come to an inside corner, use a scribe to mark the base using the corner as the pattern to get the exact curvature of the wall.
2. Cut the base to the exact length allowing a good, tight fit to the wall.
3. Apply the proper amount of adhesive and install this piece of base.
4. Using the same procedure as above, scribe and cut the second piece for the corner. (DO NOT install the second piece yet.)
5. After cutting the second piece of base, turn the piece front side down and make a back angle cut in the toe, starting at the top of the toe and cutting down to the bottom of the toe. (See Figure 6: Cut #1)
6. Check the fit with the previously installed piece.
7. Make any additional cuts to ensure a snug fit.
8. Apply adhesive and install (Figure 7).

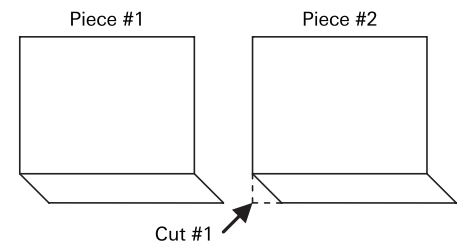


Figure 6

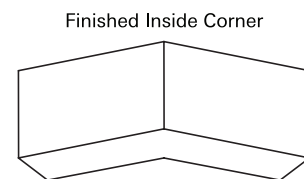


Figure 7

MOHAWK GROUP WALL BASE AND ACCESSORIES MAINTENANCE

Initial Maintenance

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth. Allow the adhesive on the wall base to thoroughly dry before completing the following initial maintenance procedure.

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using neutral cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

Routine Maintenance

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using neutral cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.