



K-1500™ CLEANING & START-UP PROCEDURE

This procedure demonstrates how to properly clean and sanitize the Keurig® K-1500™ brewer.

This procedure should take approximately 30 minutes


Tools Needed

- ◆ Keurig® K-Cup® Pod Deep Cleaning Kit (*if available*)
- ◆ Urnex® Liquid Dezcal™
- ◆ Large bucket or water-tight container
- ◆ Available sink




Disconnecting & Draining


1. Turn power off by pressing power button

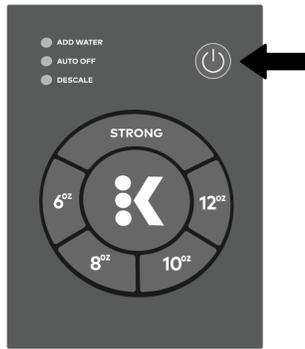


2. Carefully unplug brewer from power source

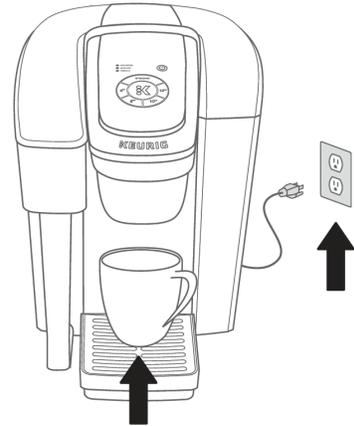

3. Remove reservoir and empty

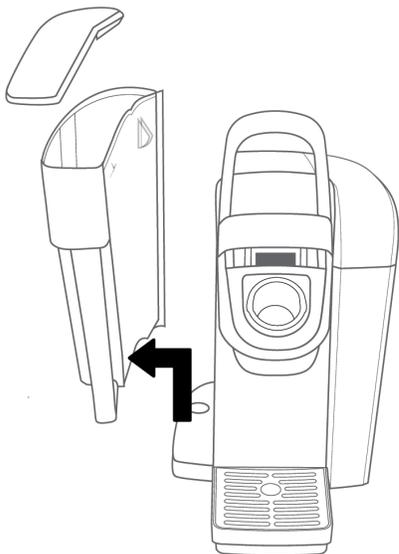


4. Locate door on rear of brewer and remove drain line. Drain water from brewer into a water-tight container.

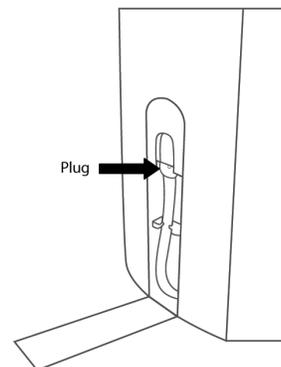


Cleaning & Sanitizing

5. Lift handle and remove any used K-Cup® pod that may be present

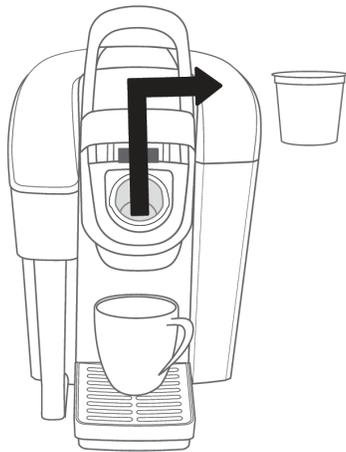

6. Remove all parts as shown below and clean and sanitize thoroughly per Clean & Sanitizing procedures on page 4.


*Follow up with disinfectant wipes or prepared sanitizing spray on exterior of brewer **ONLY**.*

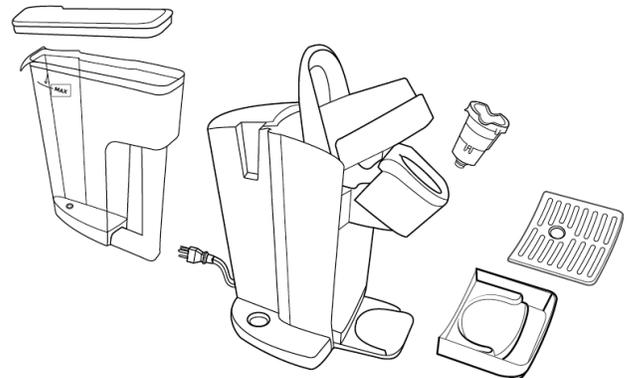


7. Wipe interior of the puncture mechanism with a clean cloth dipped in Urnex® Complete Café sanitizer.

If available, Urnex® Café Wipz can be used.

CAUTION
Sharp Needle

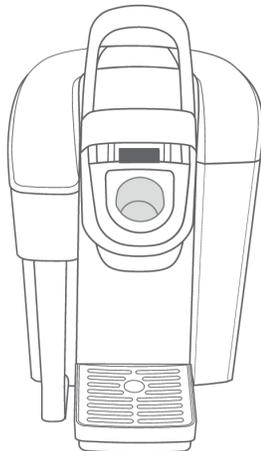

8. Reassemble all parts as performed in step 6

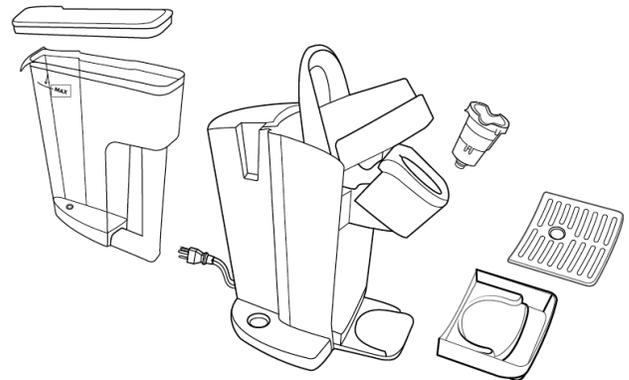

Cleaning & Sanitizing Procedure



Cleaning Solution

1. Prepare cleaning solution by adding 8 oz. (240 ml) of Urnex[®] Rinza concentrate to 1 gallon (3.5 L) of warm tap water (or equivalent dilution)
2. Mix well and use immediately
3. Soak removed parts for 30 minutes in solution

Note: *If parts could not be removed from the appliance, then add cleaning solution to a soft cloth and use it to coat appliance parts then let sit for 30 minutes*

Note: *If Sanitize step is not performed, Rinse parts thoroughly to remove Urnex[®] Rinza completely for surfaces*

Sanitizing Solution

1. Prepare sanitizer solution by adding 0.5 oz. (15 mL) of Urnex[®] Complete Café concentrate to 1 gallon (3.7 L) of warm tap water
2. Mix well and use immediately
3. Soak parts in solution for 1 minute

NOTE: *If parts could not be removed from the appliance, then add sanitizing solution to a soft cloth and use it to coat appliance parts and let sit for 1 minute*

4. Remove parts from solution and allow to drain and dry completely

Do **NOT** rinse or apply water

If parts were not removed from the appliance, wipe with a clean soft cloth and let air dry

Sanitize Spray for Machine Surfaces (as needed)

1. Prepare a solution of 4 mL of Urnex[®] Complete Café Sanitizer to 1 L of water in a spray bottle
2. Spray exterior surface of appliance and allow solution to remain on surface for 1 minute
3. Wipe away with clean cloth and allow to fully air dry

Urnex[®] Café Wipz


These can be used to wipe down any components of the brewer that cannot be easily removed

Urnex[®] Cleaning Cups

These can be used during Cleansing brews to clean the bottom of the pod holder and exit needle

Running a Cleansing Brew

7. Empty reservoir and refill with fresh water.

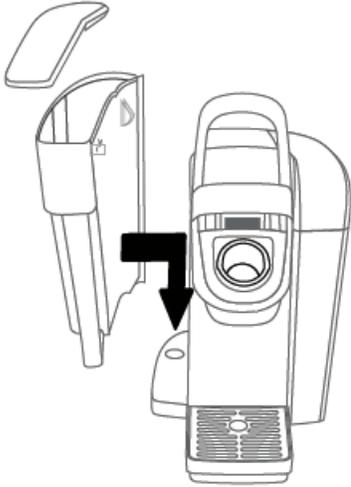

8. Lift and close the handle.

Do NOT insert a K-Cup® pod

Brew 3 (8 oz.) cleansing brews



PROCEDURE COMPLETE!

If you have any questions please contact Keurig® Commercial Technical Support:
888-287-2739 option 5