















CROSLEY
FURNITURE

Sideboard






CF4213

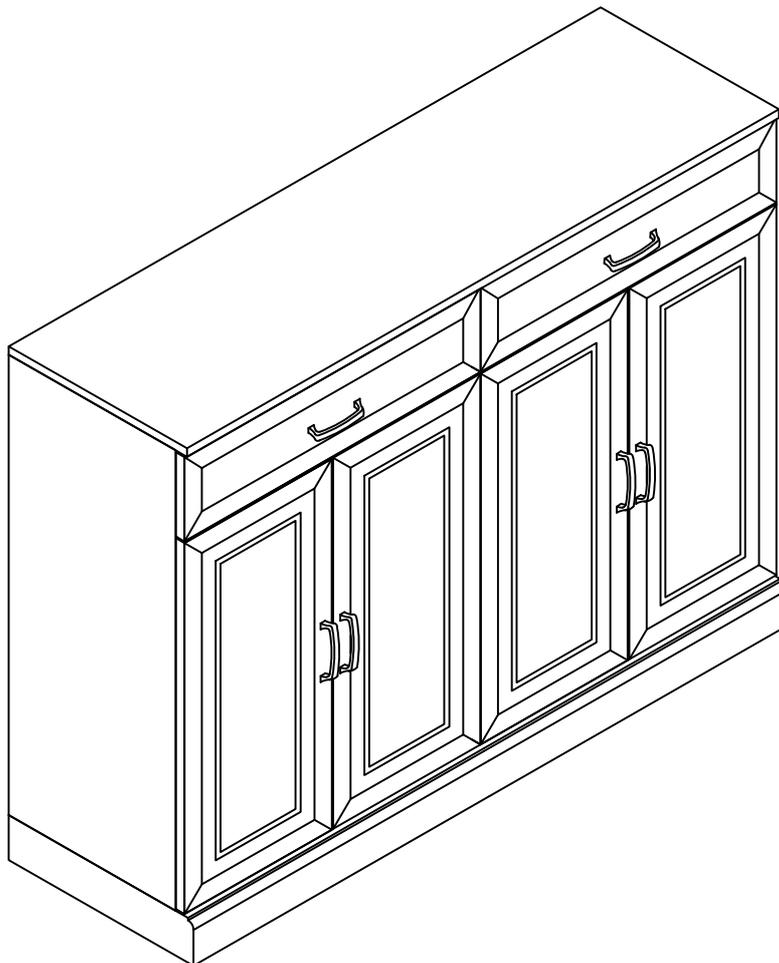

PART LIST

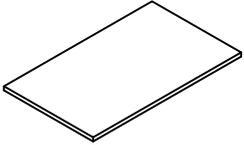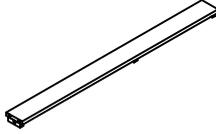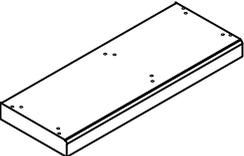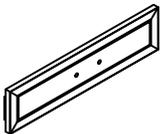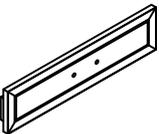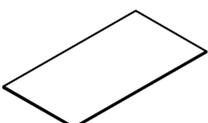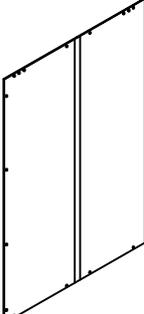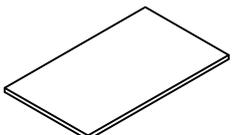
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Partition Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Cross Rail 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Bottom Panel 1 PC</p>	<p>Drawer Left Front Panel 1 PC</p>	<p>Drawer Right Front Panel 1 PC</p>	<p>Drawer Left Panel 2 PCS</p>	<p>Drawer Right Panel 2 PCS</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Drawer Back Panel 2 PCS</p>	<p>Drawer Bottom Panel 2 PCS</p>	<p>Left Door Panel 2 PCS</p>	<p>Right Door Panel 2 PCS</p>	<p>Back Panel 2 PCS</p>
<p>P</p>  <p>Adjustable Shelf 2 PCS</p>				

HARDWARE LIST

 Ø1/4"*25mm	 Ø1/4"*11mm	 Ø1/4"*13mm	 4mm*90	 Ø8*30mm
Bolt 15 PCS (Extra 1)	Spring Washer 15 PCS (Extra 1)	Flat Washer 15 PCS (Extra 1)	Allen Wrench 1 PC	Wood Dowel 16 PCS (Extra 1)
	 6*3*15mm			 7*3.5*15mm
Double Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)	Straight Door Hinge 4 PCS	Spring Door Hinge 4 PCS	Screw 48 PCS (Extra 1)
	 5/32"*19mm	 5/32"*15mm		 8*3*15mm
Handle 6 PCS	Long Round Head Bolt 8 PCS (Extra 1)	Short Round Head Bolt 4 PCS (Extra 1)	Shelf Holder 8 PCS (Extra 1)	Short Screw 26 PCS (Extra 1)
	 8*4*25			
Safety Strap Kit 1 SET	Long Screw 16 PCS (Extra 1)			

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach double magnets (part #6) to cross rail (part E) using round head screws (part #7) and phillips head screwdriver. Attach handles (part #11) to drawer left front panel (part G) and drawer right front panel (part H) using short round head bolts (part #13) and phillips head screwdriver.

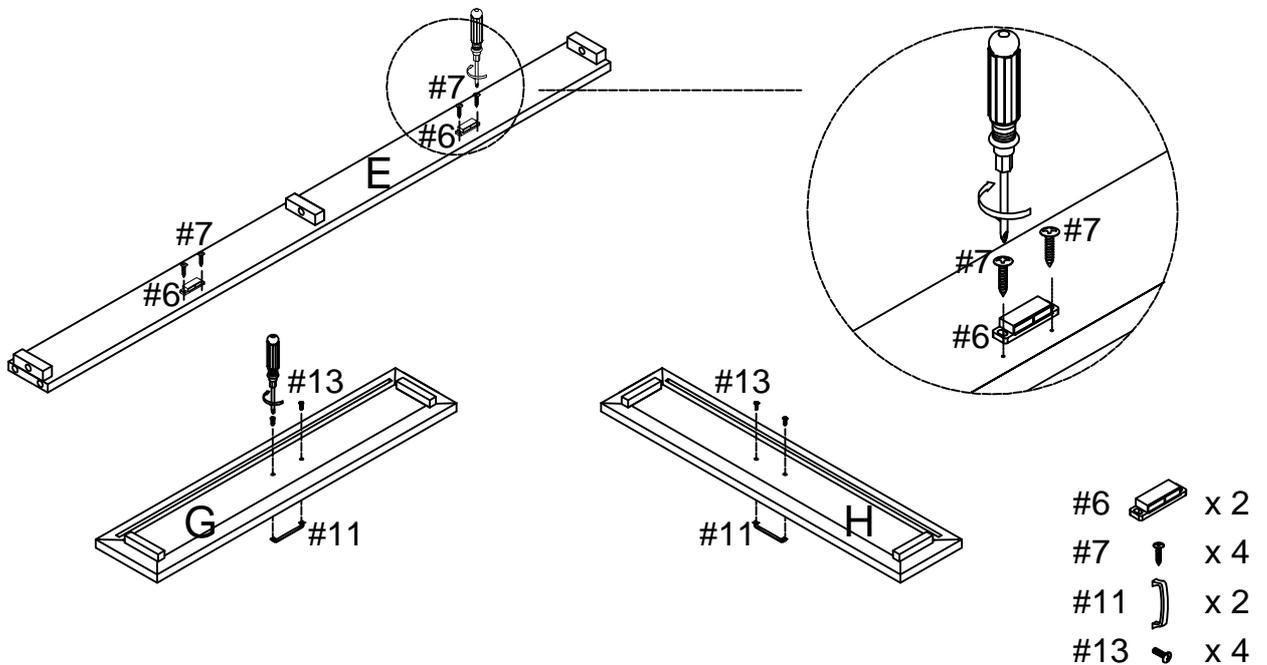

Step 2. Attach straight door hinges (part #8) and spring door hinges (part #9) to left door panels (part M) and right door panels (part N) using screws (part #10) and phillips head screwdriver. Attach handles (part #11) to left door panels (part M) and right door panels (part N) using long round head bolts (part #12) and phillips head screwdriver.

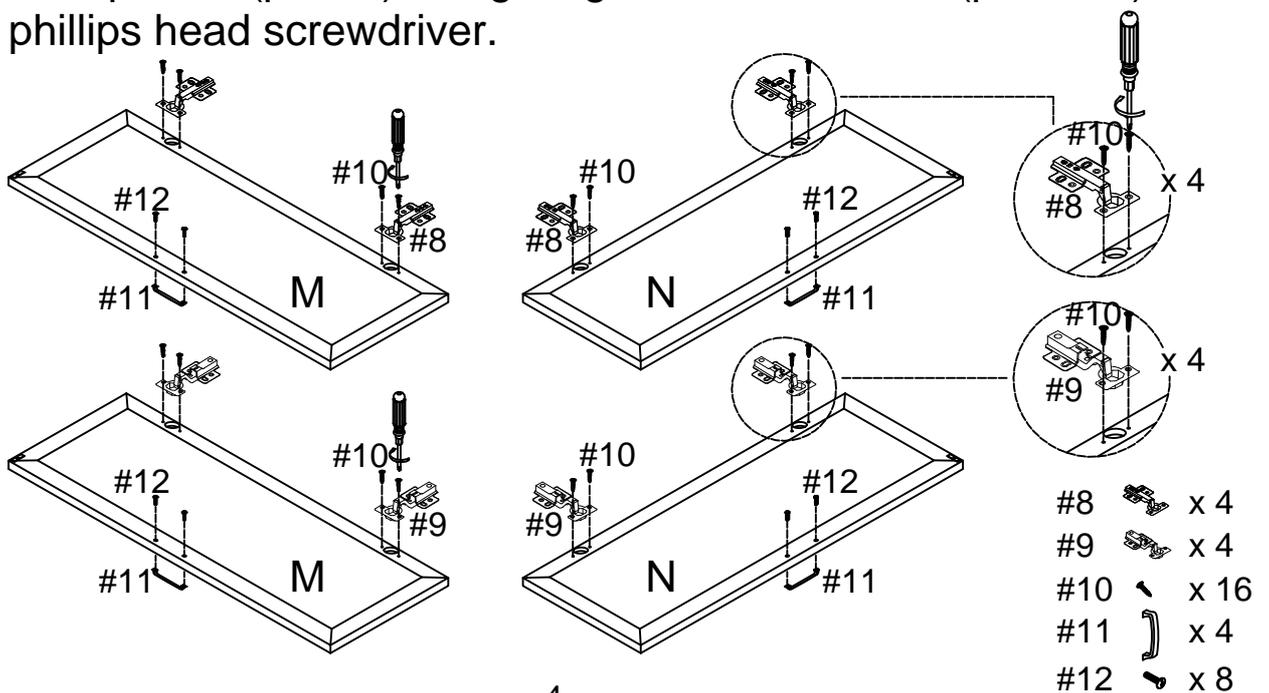


Step 3. Attach drawer panels (parts I & J) to drawer left front panel (part G) and drawer right front panel (part H) using long screws (part #17) and phillips head screwdriver. Slide drawer bottom panels (part L) into the grooves of assembled units (parts G, H, I & J). Attach drawer back panels (part K) to assembled units (parts I, J & L) using long screws (part #17) and phillips head screwdriver.

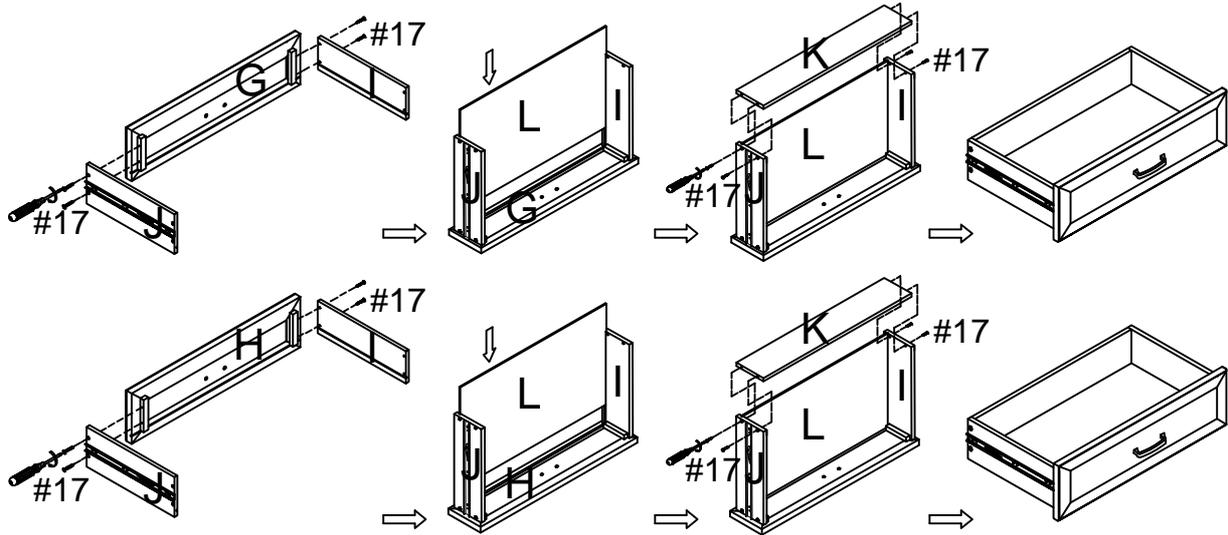


#17  x 16

Step 4. Attach cross rail (part E) to partition panel (part C) using bolt (part #1), spring washer (part #2), flat washer (part #3) and allen wrench (part #4). Attach left panel (part B) and right panel (part D) to cross rail (part E) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

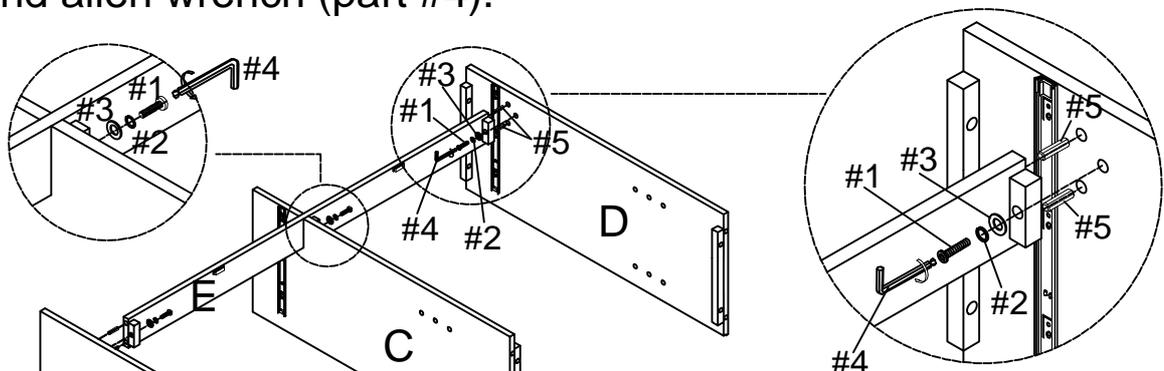


#1  x 3
 #2  x 3
 #3  x 3
 #4  x 1
 #5  x 4

Step 5. Attach top panel (part A) to assembled unit (parts B, C & D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

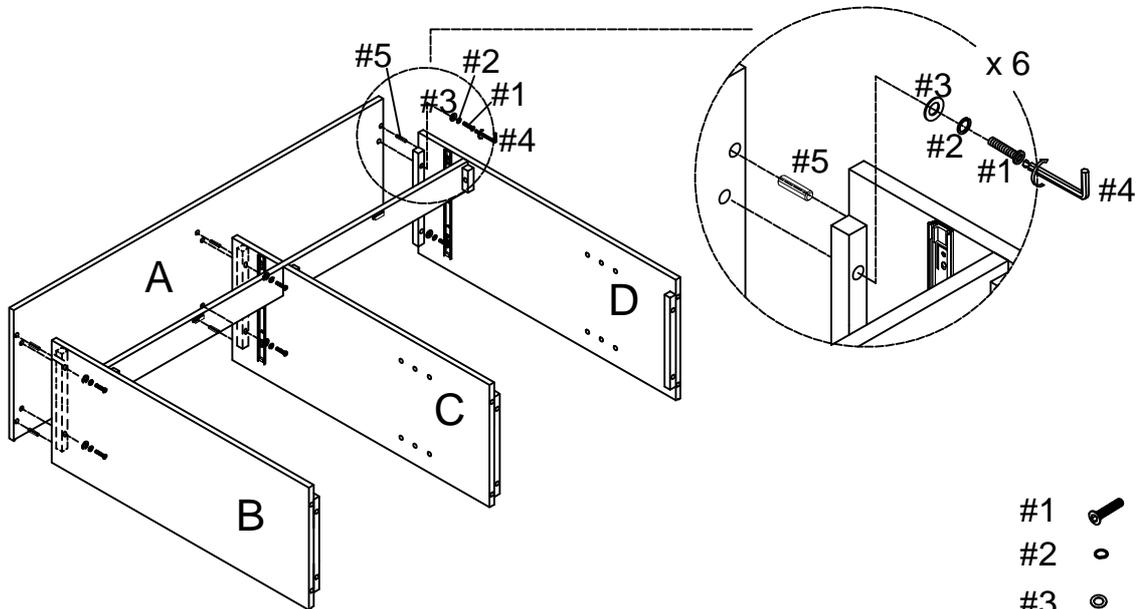


- #1  x 6
- #2  x 6
- #3  x 6
- #4  x 1
- #5  x 6

Step 6. Attach bottom panel (part F) to assembled unit (parts B, C & D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

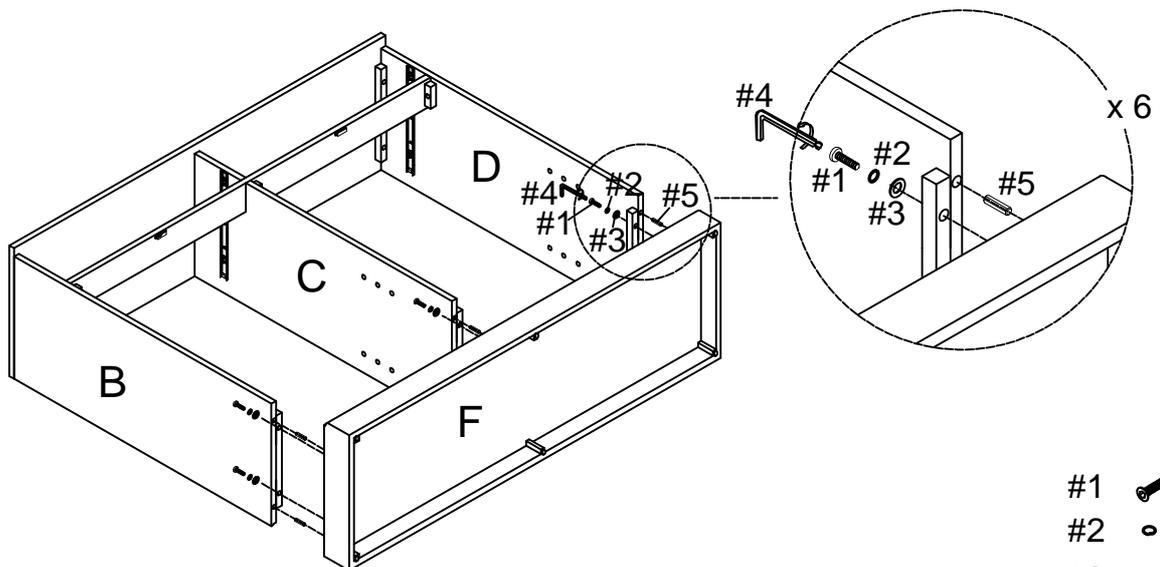


- #1  x 6
- #2  x 6
- #3  x 6
- #4  x 1
- #5  x 6


Step 7. Carefully turn unit upright. Attach back panels (part O) to assembled unit (parts A, B, C, D & F) using short screws (part #15) and phillips head screwdriver.

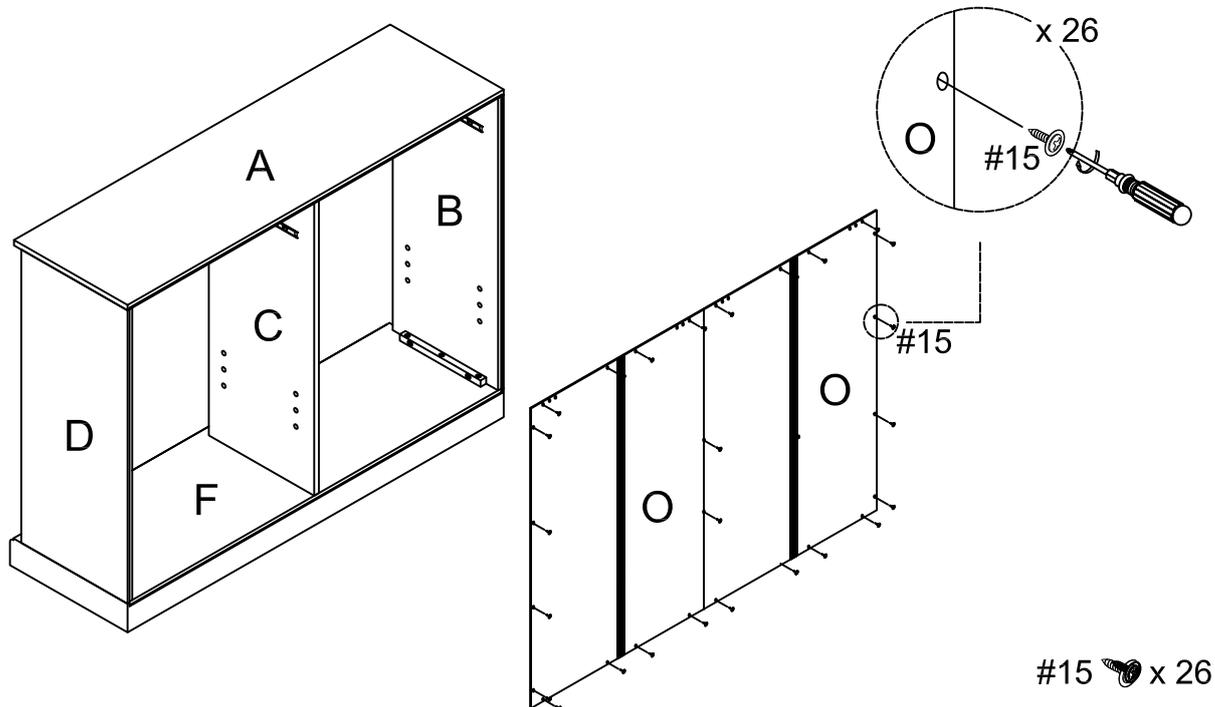

Step 8. Place shelf holders (part #14) into desired position and slide adjustable shelves (part P) and assembled drawers into place.
 Note: To release trigger disconnect levers push one side up and the other down.

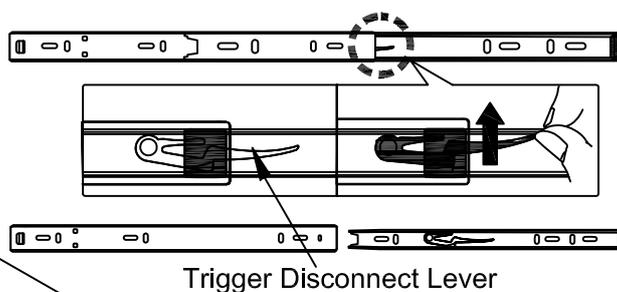



Move the sliders to the front end of rail before sliding the drawer into place.

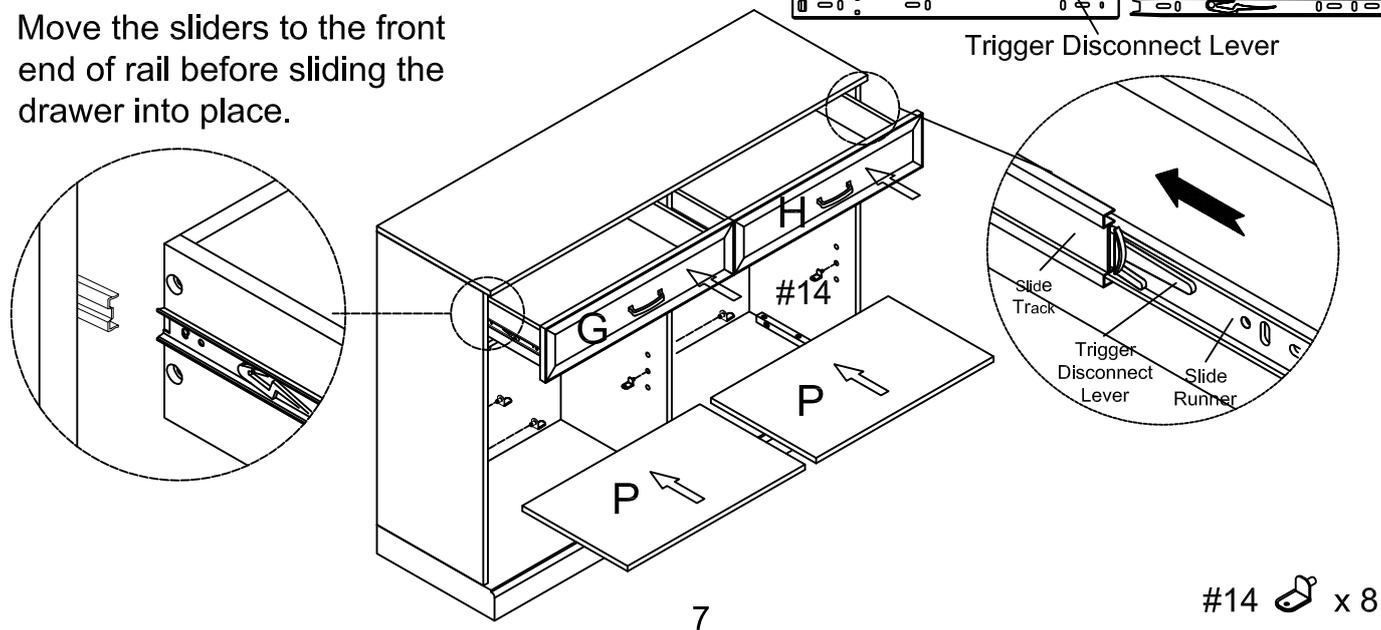


Step 9. Attach door panels (parts M & N) to panels (parts B & D) and partition panel (part C) using screws (part #10) and phillips head screwdriver.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury.

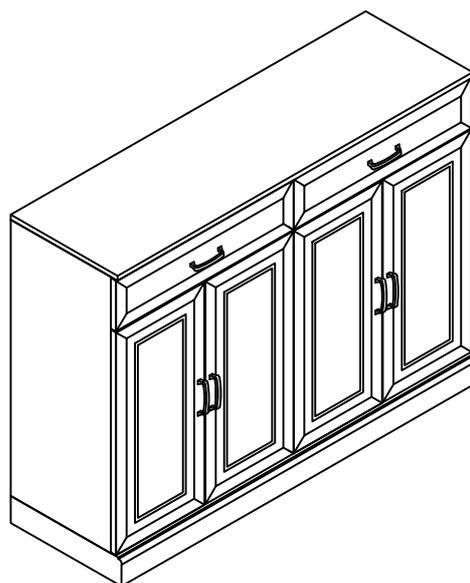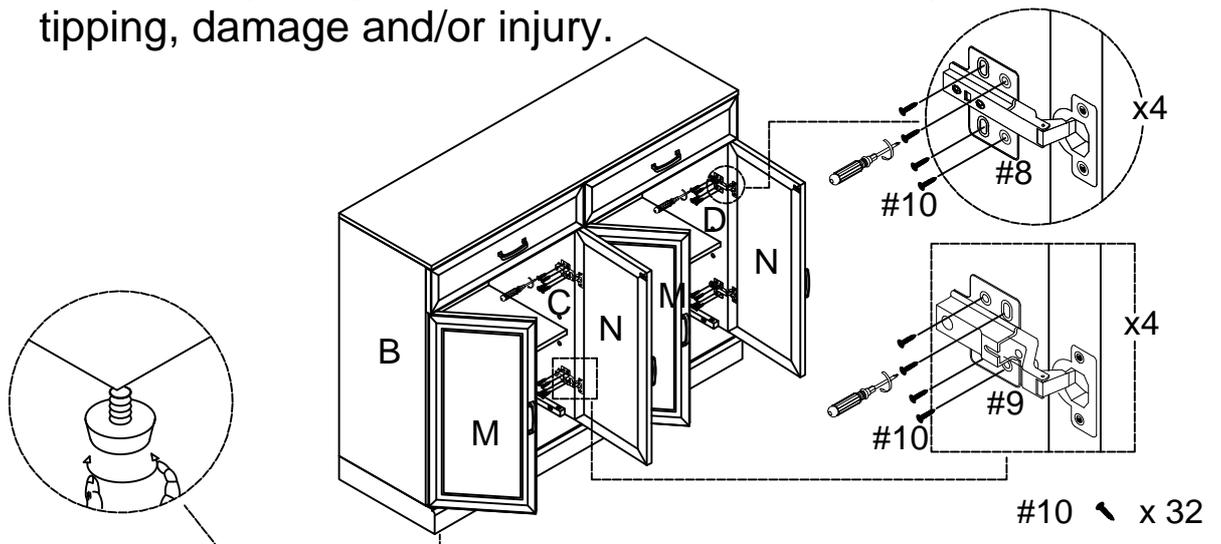

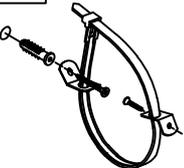
#16	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

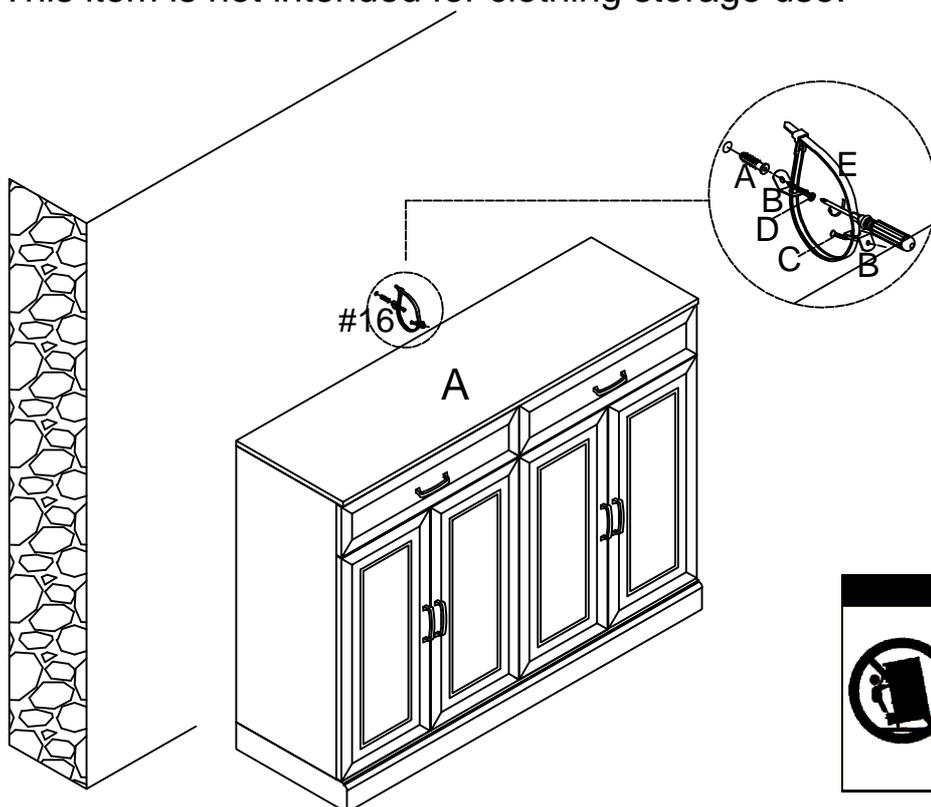

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs (23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door.

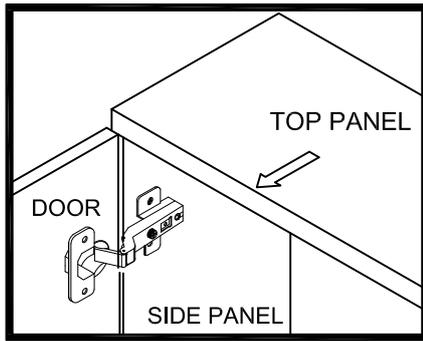


STEP 2

Adjust the gap between door panel and side panel

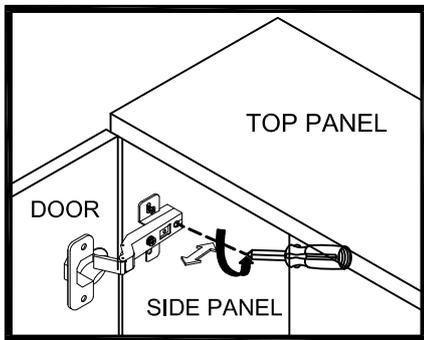


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

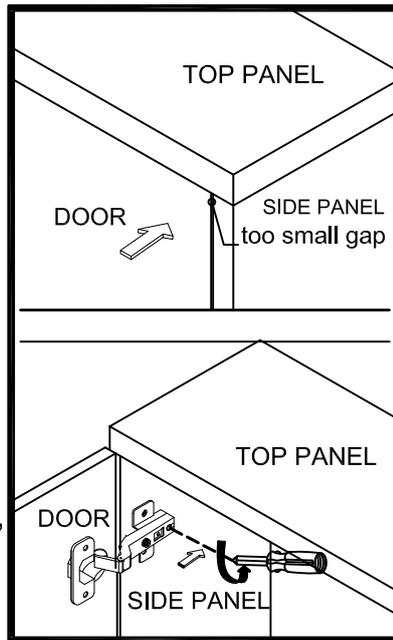

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

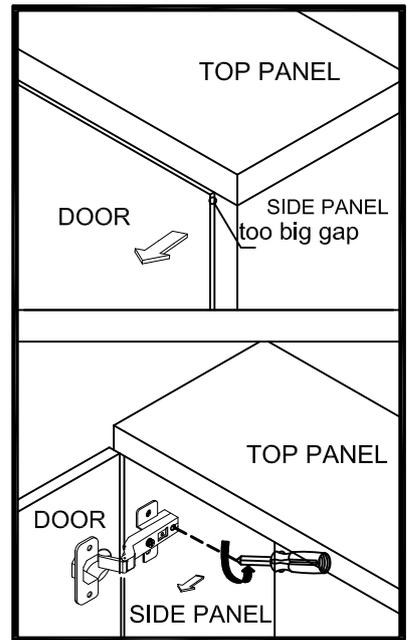

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

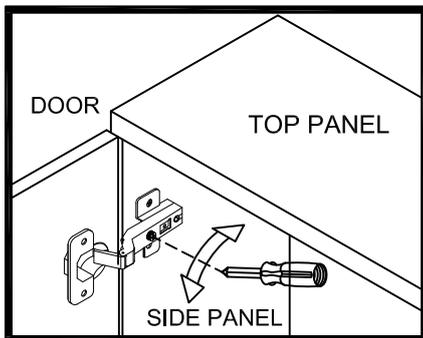


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

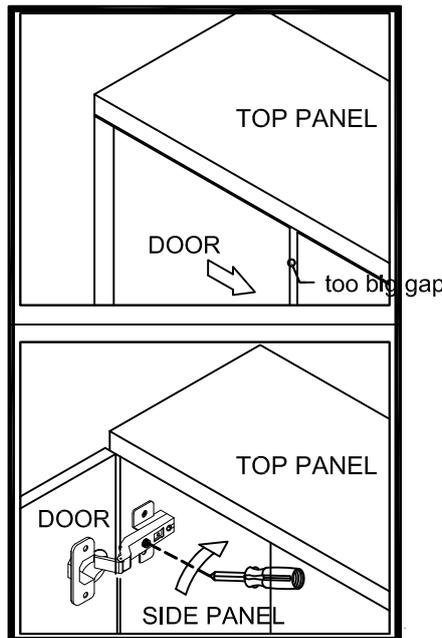

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

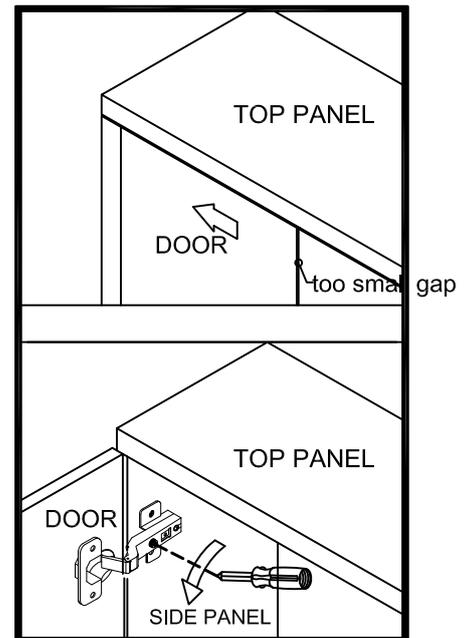

Turn the screw counterclockwise a little as shown to make the gap big.